



123K00

Illustrated Parts List

Model Series

123K00

TYPE NUMBERS
0005 through 3717.

TABLE OF CONTENTS

Alternator	6
Air Cleaner	4
Blower Housing/Shrouds	5
Camshaft	2
Carburetor	3
Controls	4
Crankshaft	2
Cylinder	2
Electric Starter	6
Electrical	6
Engine Sump	2
Exhaust System	4
Flywheel	6
Flywheel Brake	6
Fuel Supply	4
Governor Spring	4
Ignition	6
Kits/Gaskets	2 & 3
Lubrication	2
Piston Group	2
Rewind Starter	6
Valves	2

BRIGGS & STRATTON



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

1319 WARNING LABEL



REQUIRED when replacing parts with warning labels affixed.




1058 OPERATOR'S MANUAL






1330 REPAIR MANUAL








1019 LABEL KIT



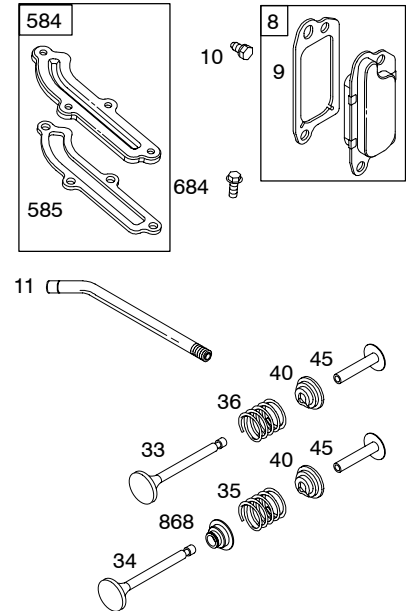
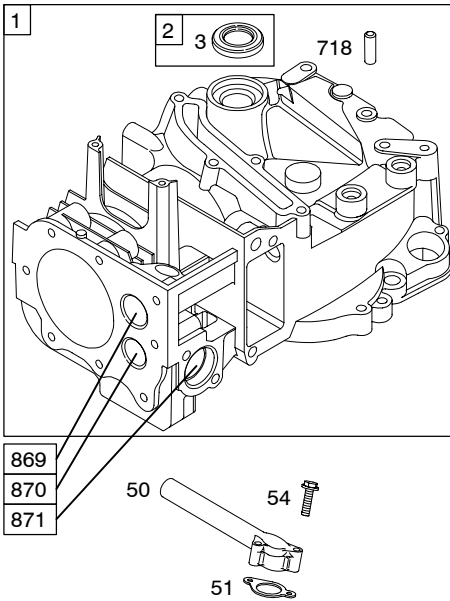
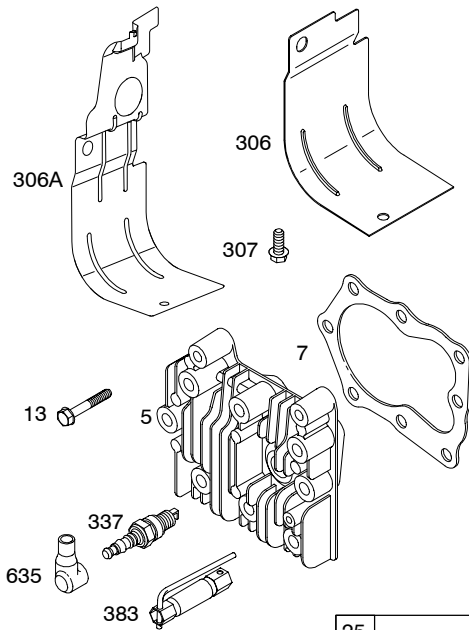


1095 VALVE GASKET SET

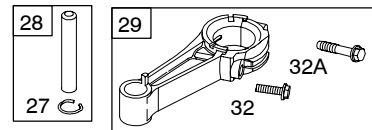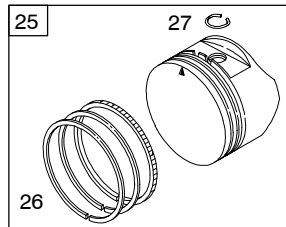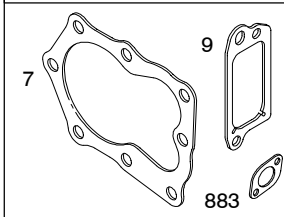



358 ENGINE GASKET SET

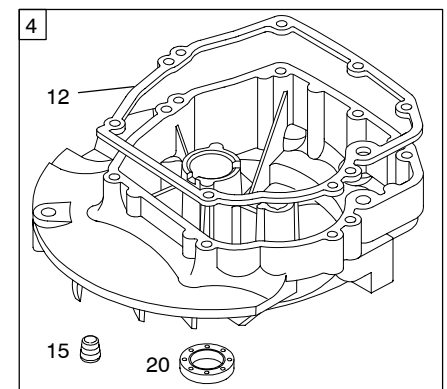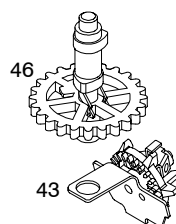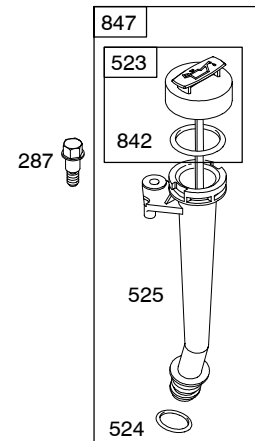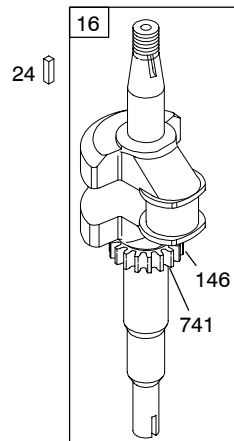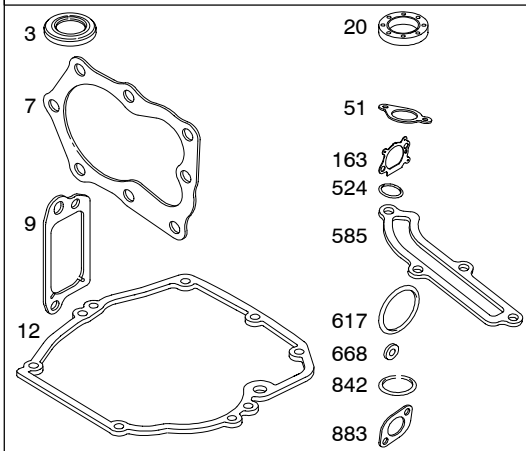

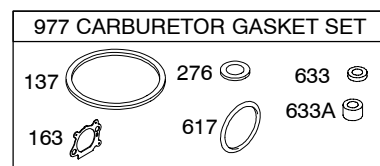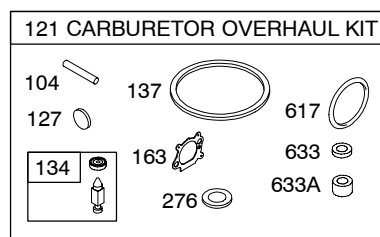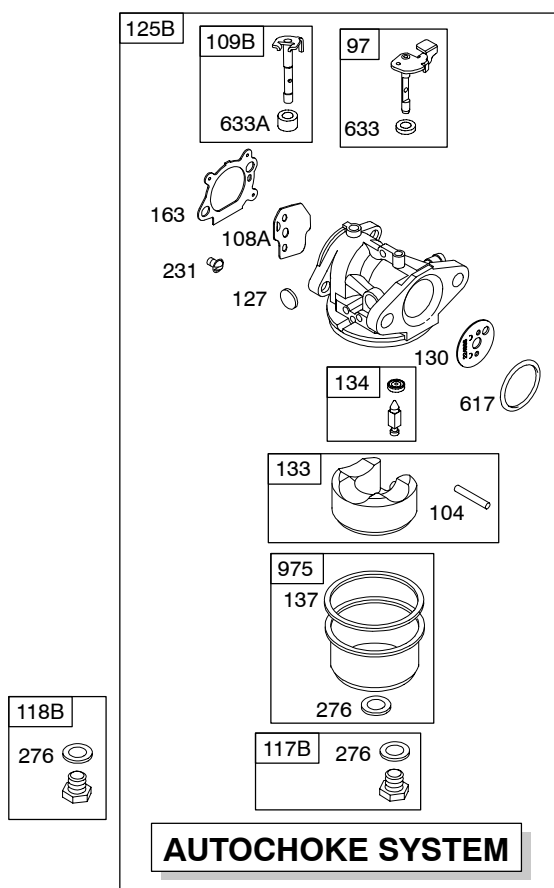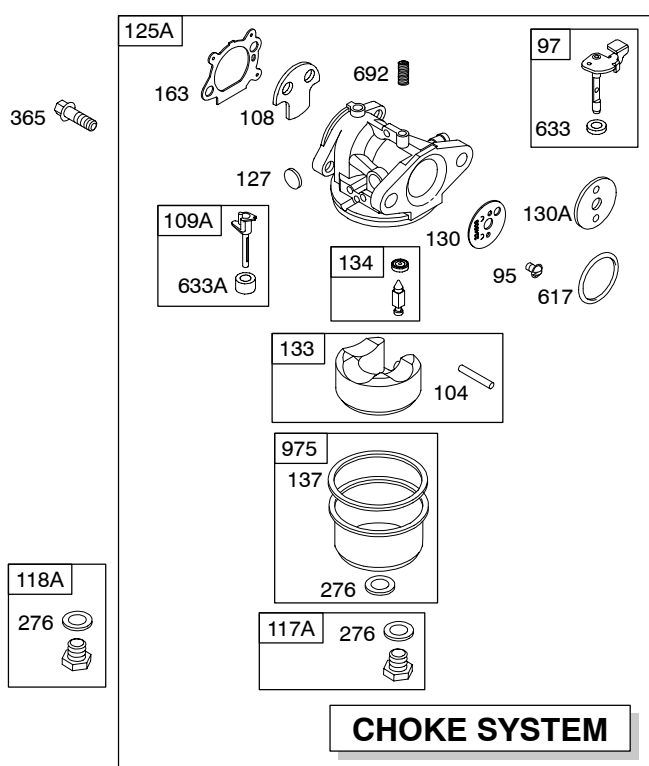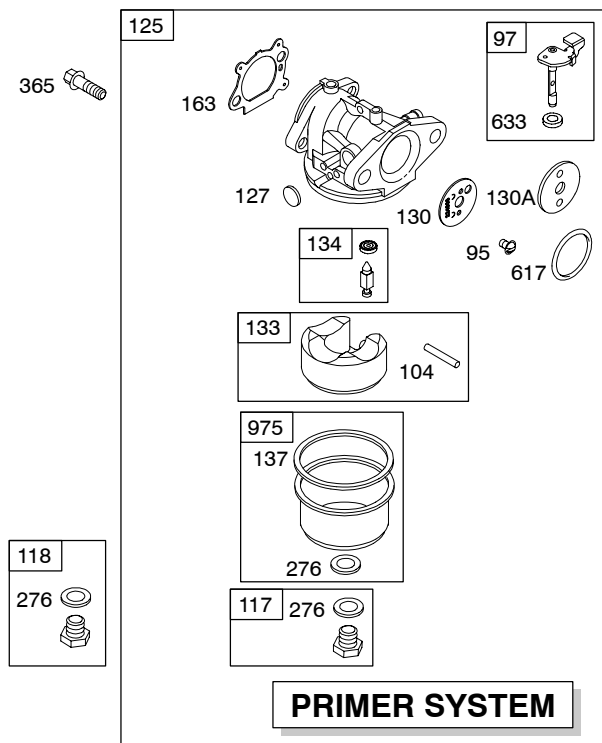


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

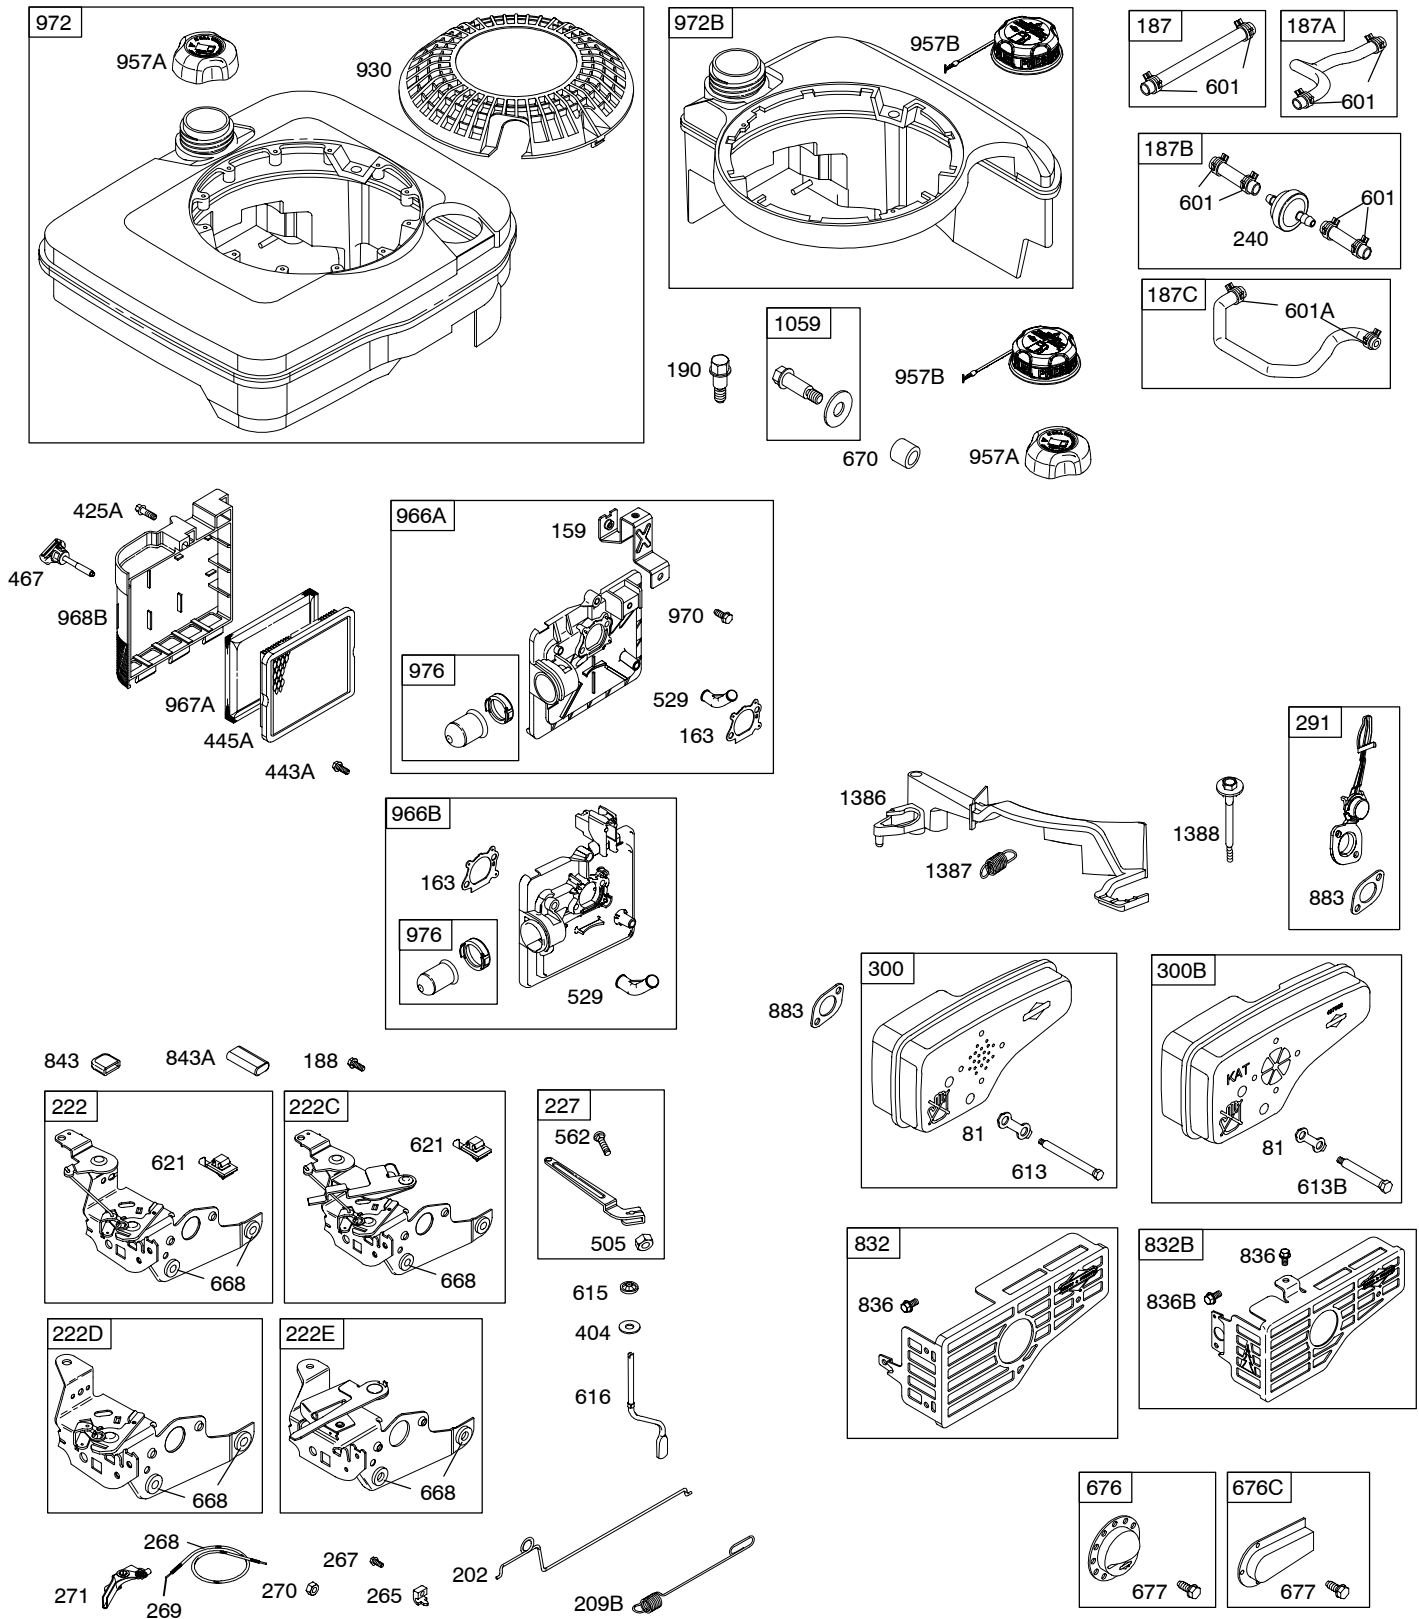

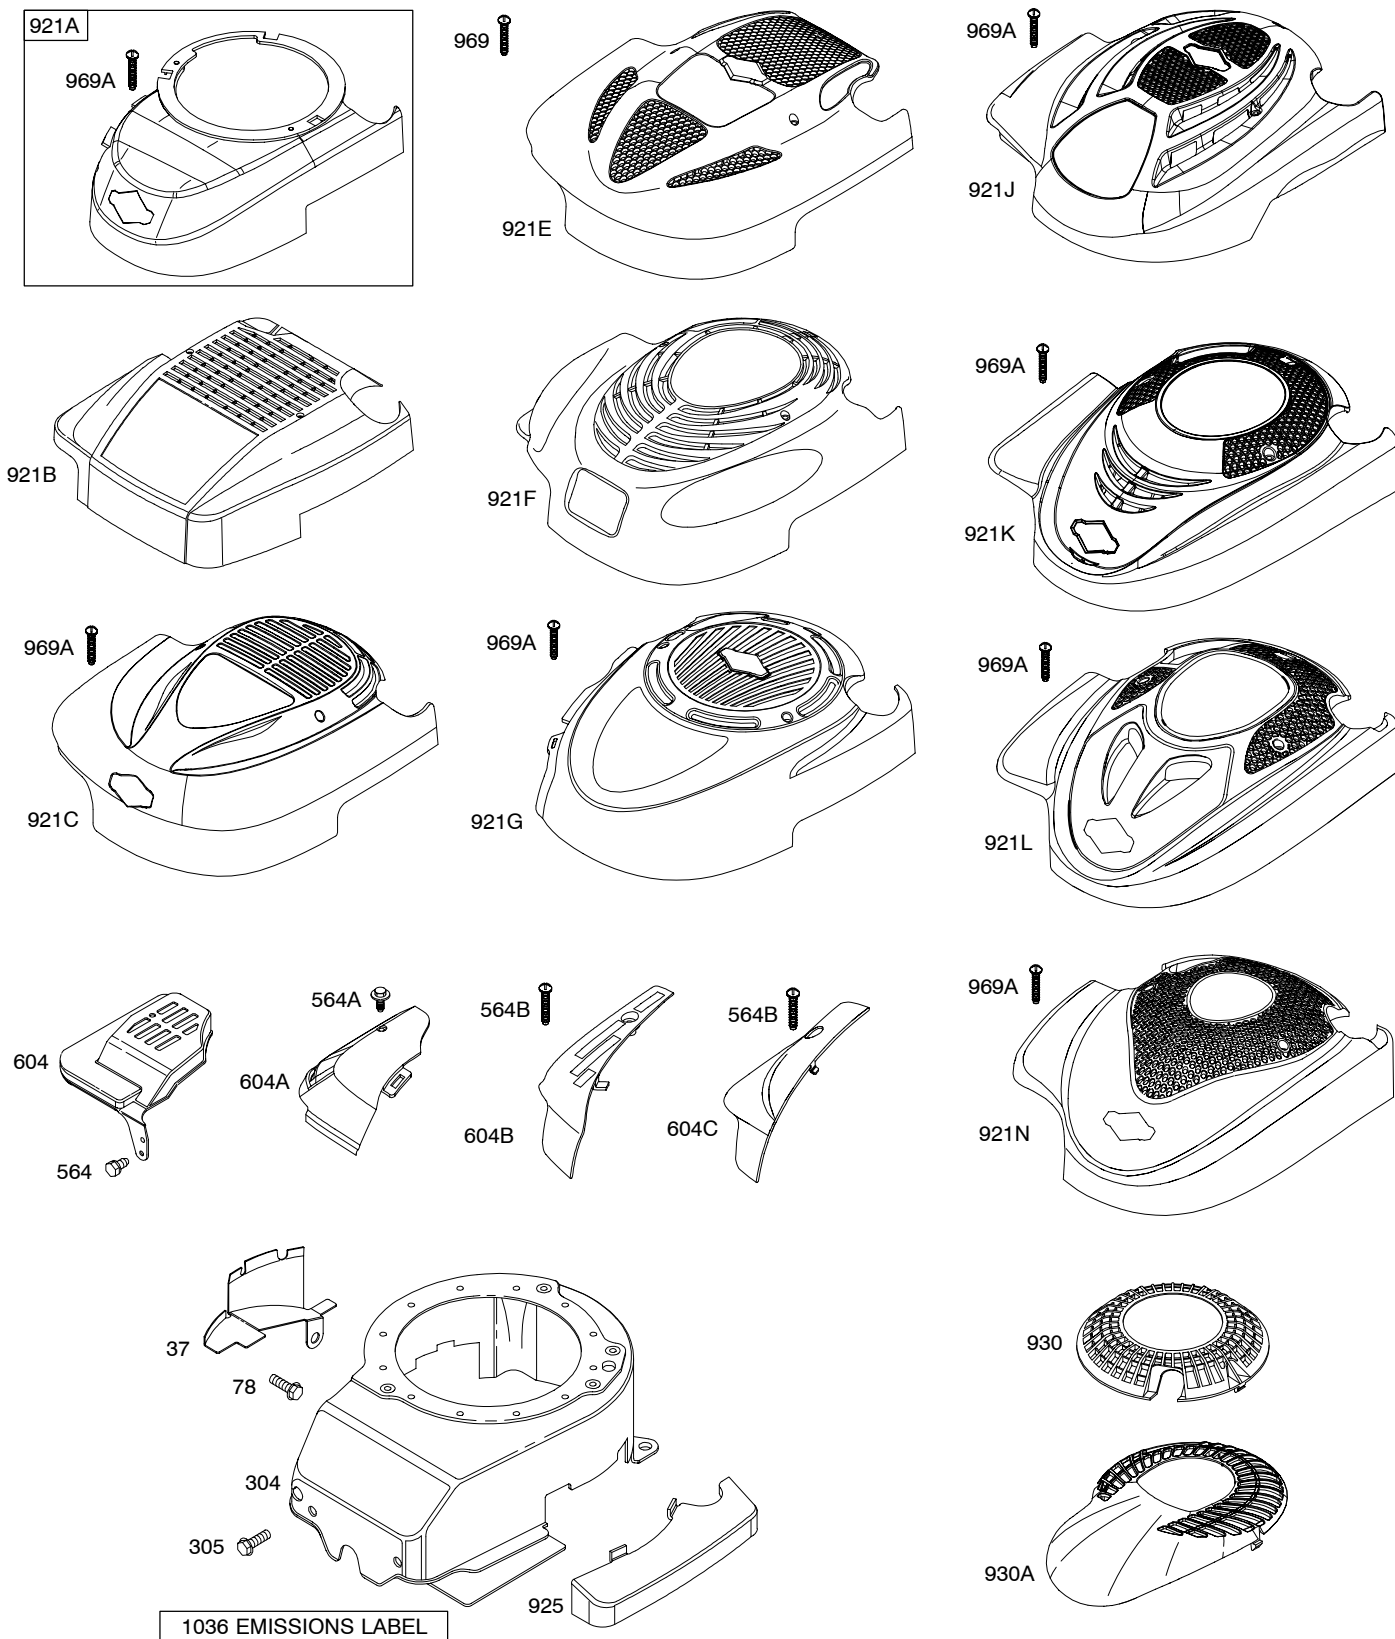

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

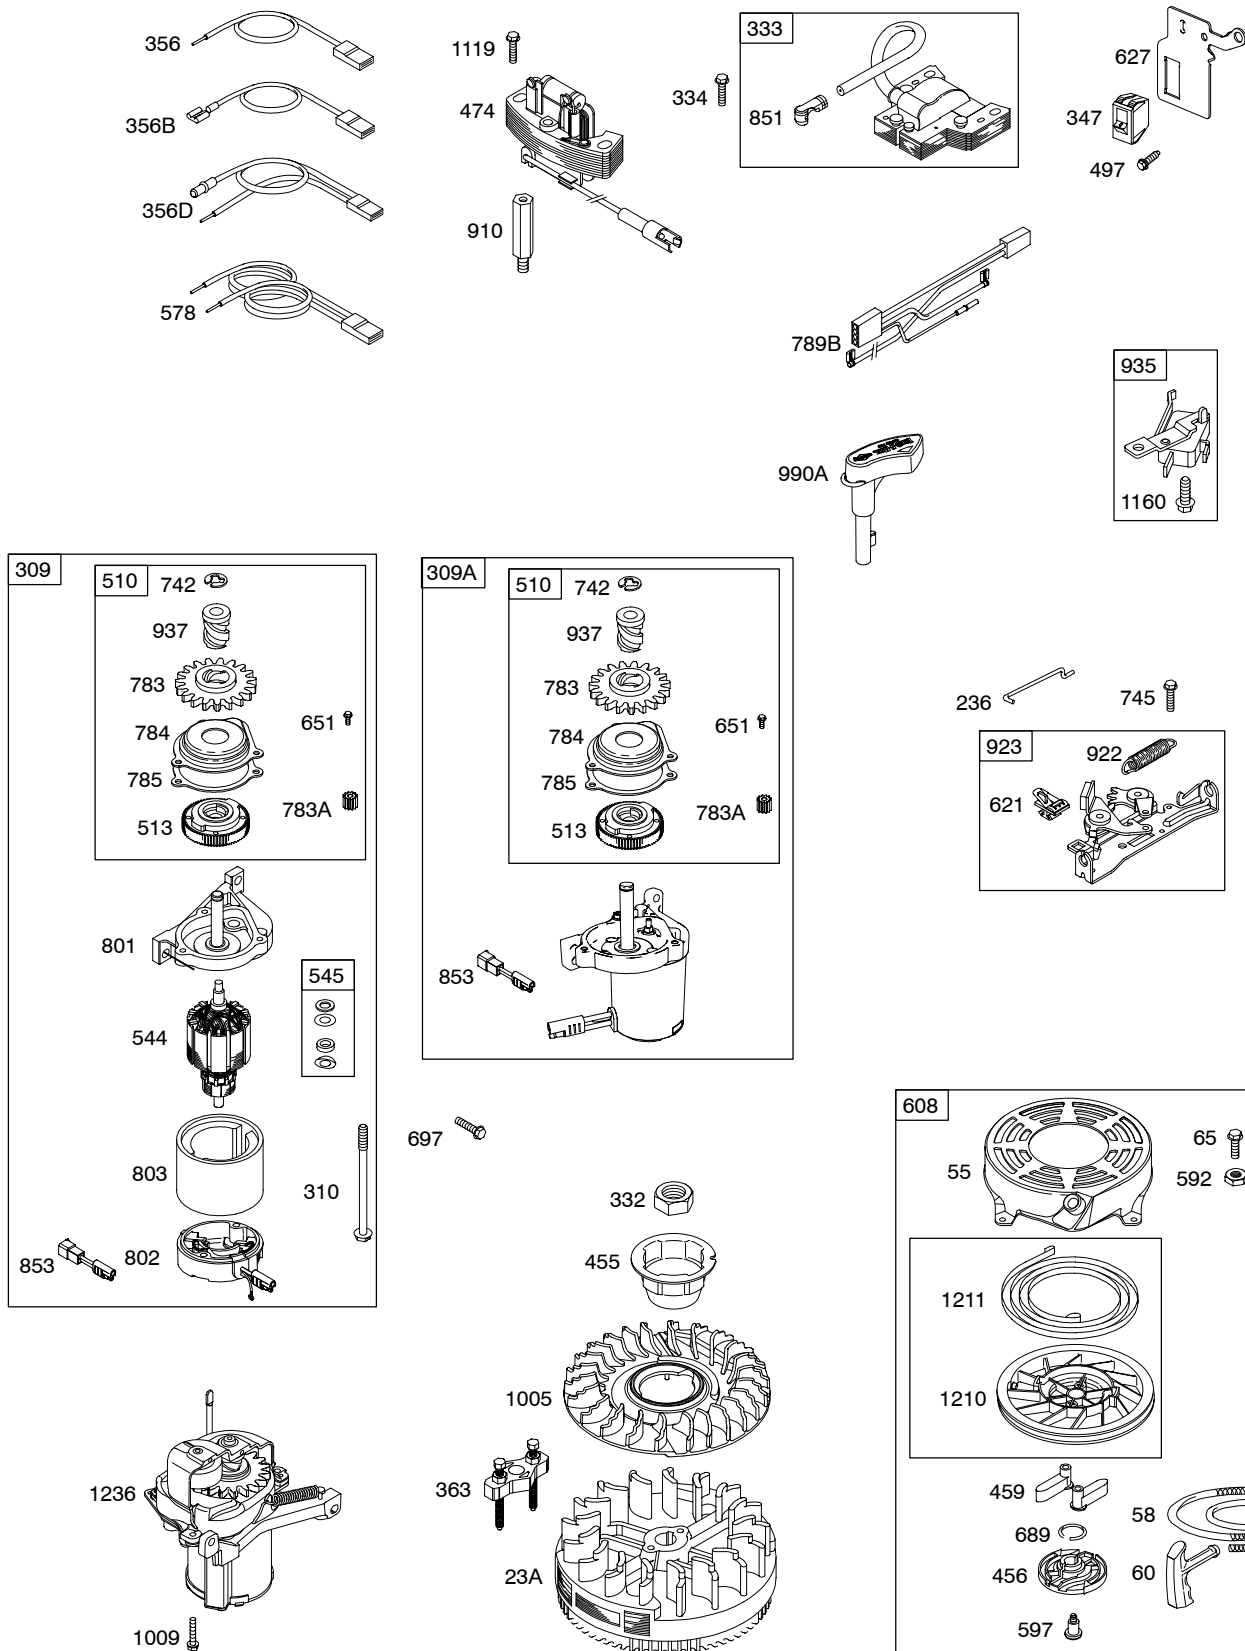

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	
1	697322	Cylinder Assembly	16	691450	Crankshaft	23A	691987	Flywheel	
2	399269	Kit-Bushing/Seal (Magneto Side)			----- Note -----			----- Note -----	
3	★299819S	Seal-Oil (Magneto Side)		691451	Crankshaft Used on Type No(s). 0015, 0060, 0062, 0107, 0116, 0117, 0120, 0121, 0127, 0139, 0145, 0147, 0181, 0183, 0184, 0185, 0193, 0194, 0195, 0196, 0197, 0208, 0209, 0210, 0217, 0218, 0222, 0223, 0224, 0225, 0226, 0230, 0231, 0232, 0235, 0237, 0239, 0244, 0261, 0266, 0271, 0273, 0277, 0283, 0307, 0336, 0515, 0560, 0615.		691992	Flywheel Used on Type No(s). 0005, 0113, 0130, 0131, 0132, 0134, 0137, 0138, 0156, 0236, 0238, 0269, 0509.	
4	493279	Sump-Engine ----- Note ----- 696294 Sump-Engine Used on Type No(s). 0121, 0194, 0244. 498983 Sump-Engine Used on Type No(s). 0131, 0134, 0138.						696291	Flywheel Used on Type No(s). 0121, 0194, 0244.
5	691160	Head-Cylinder				24	222698S	Key-Flywheel	
7	★Ø692249	Gasket-Cylinder Head				25	791097	Piston Assembly (Standard)	
8	695250	Breather Assembly						----- Note -----	
9	★Ø696125	Gasket-Breather						791326	Piston Assembly (.020" Oversize) (Used After Code Date 04102100).
10	691125	Screw (Breather Assembly)						697341	Piston Assembly (.020" Oversize) (Used Before Code Date 04102200). (.010" Oversize)
11	691781	Tube-Breather						697342	Piston Assembly (.030" Oversize)
12	★692232	Gasket-Crankcase				26	791098	Ring Set (Standard) (Used After Code Date 04031400).	
13	690912	Screw (Cylinder Head)						----- Note -----	
15	691680	Plug-Oil Drain (Square Socket)						499425	Ring Set (Standard) (Used Before Code Date 04031500).
								791324	Ring Set (.020" Oversize) (Used After Code Date 04102100).
								499427	Ring Set (.020" Oversize) (Used Before Code Date 04102200).
			20	★399781S	Seal-Oil (PTO Side)				
			22	691092	Screw (Crankcase Cover/ Sump)				

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

123K00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
28	499423	Pin-Piston (Standard)	117	498978	Jet-Main (Standard)	121	498260	Kit-Carburetor Overhaul
29	499424	Rod-Connecting (Standard)			----- Note -----	125	498170	Carburetor (Primer System)
32	691664	Screw (Connecting Rod)		494870	Jet-Main (Standard)			----- Note -----
32A	695759	Screw (Connecting Rod)			Used on Type No(s). 0336, 0515, 0518, 0525, 0560, 0562, 0563, 0666, 0717, 3717.		790821	Carburetor (Primer System)
33	262651S	Valve-Exhaust						Used on Type No(s). 0336, 0515, 0518, 0525, 0560, 0562, 0563, 0666, 0717, 3717.
34	262652S	Valve-Intake	117A	498978	Jet-Main (Standard)	125A	499059	Carburetor (Choke System)
35	691270	Spring-Valve (Intake)			----- Note -----			----- Note -----
36	691270	Spring-Valve (Exhaust)		498981	Jet-Main (Standard)		79253	Carburetor (Choke System)
37	694086	Guard-Flywheel			Used on Type No(s). 0005, 0113, 0130, 0131, 0134, 0137, 0138, 0236, 0238, 0240, 0269, 0332, 0509.			Used on Type No(s). 0005, 0113, 0130, 0131, 0134, 0137, 0138, 0236, 0238, 0240, 0269, 0332, 0509.
40	692194	Retainer-Valve	117B	697355	Jet-Main (Standard)	125B	790845	Carburetor (Autochoke System)
43	691997	Slinger-Governor/Oil	118	497466	Jet-Main (High Altitude)	127	●694468	Plug-Welch
45	690548	Tappet-Valve			----- Note -----	130	696564	Valve-Throttle
46	691449	Camshaft		497315	Jet-Main (High Altitude)	130A	691203	Valve-Throttle
50	497465	Manifold-Intake			Used on Type No(s). 0336, 0515, 0518, 0525, 0560, 0562, 0563, 0666, 0717, 3717.	133	398187	Float-Carburetor
51	★272199S	Gasket-Intake	118A	497466	Jet-Main (High Altitude)	134	●398188	Kit-Needle/Seat
54	691650	Screw (Intake Manifold)			----- Note -----	137	◆693981	Gasket-Float Bowl
55	691421	Housing-Rewind Starter		494870	Jet-Main (High Altitude)	146	690979	Key-Timing
58	697316	Rope-Starter (Cut To Required Length)			Used on Type No(s). 0005, 0113, 0130, 0131, 0134, 0137, 0138, 0236, 0238, 0240, 0269, 0332, 0509.	159	691753	Bracket-Air Cleaner Primer
60	281434S	Grip-Starter Rope				163	★◆272653	Gasket-Air Cleaner
65	690837	Screw (Rewind Starter)						
78	691108	Screw (Flywheel Guard)						
81	691740	Lock-Muffler Screw						
95	691636	Screw (Throttle Valve)						
97	493267	Shaft-Throttle (Metal)						
		----- Note -----						
		696565 Shaft-Throttle (Plastic)						
104	●691242	Pin-Float Hinge						
108	691182	Valve-Choke						
108A	790844	Valve-Choke						
109A	498593	Shaft-Choke	118B	692677	Jet-Main (High Altitude)			
109B	790843	Shaft-Choke						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊗ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5054-8

Assemblies include all parts shown in frames.

09/13/2007

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
187	791766	Line-Fuel (Cut to Required Length)	209B	699056	Spring-Governor ----- Note ----- 691292 Spring-Governor Used on Type No(s). 0114, 0116, 0117, 0125, 0237, 0243, 0277, 0301, 0302, 0307, 0311, 0337, 0338, 0347, 0424, 0425, 0438, 0440, 0484, 0490, 0511, 0513. 691851 Spring-Governor Used on Type No(s). 0119, 0122, 0123, 0124, 0135, 0141, 0153, 0154, 0156. 691852 Spring-Governor Used on Type No(s). 0121, 0142. 691290 Spring-Governor Used on Type No(s). 0005, 0134, 0138, 0145, 0236, 0269. 691291 Spring-Governor Used on Type No(s). 0113, 0126, 0130, 0131, 0132, 0137, 0240, 0332, 0509. 790944 Spring-Governor Used on Type No(s). 0238.	222D	692467	Bracket-Control (Fixed Speed) ----- Note ----- 791128 Bracket-Control (Fixed Speed) Used on Type No(s). 0145, 0154, 0478, 0479, 0481, 0576, 0582, 0587, 0589, 0592, 0609, 0611, 0613, 0618, 0630, 0631, 0639, 0657, 0664, 0665, 0666, 0674, 0717, 3717.
187A	791873	Line-Fuel (Molded)				227	690783	Lever-Governor Control
187B	791891	Line-Fuel (Includes Filter) (Used After Code Date 05063000). ----- Note ----- 692042 Line-Fuel (Includes Filter) (Used Before Code Date 05070100).				231	691636	Screw (Choke Valve)
187C	791875	Line-Fuel (Molded)				236	691826	Link-Lockout
188	693399	Screw (Control Bracket)				240	298090S	Filter-Fuel
190	690940	Screw (Fuel Tank)				265	690798	Clamp-Casing
202	691829	Link-Mechanical Governor				267	691044	Screw (Casing Clamp)
						268	691025	Casing-Control Wire (Cut to Required Length)
						269	691026	Wire-Control (Cut to Required Length)
						270	691027	Nut (Control Wire Casing)
						271	691028	Lever-Control
						276 ♦	271716	Washer-Sealing (Main Jet)
						287	690940	Screw (Dipstick Tube)
						291	790830	Thermostat
			222	790143	Bracket-Control (Remote/Manual Friction)(Primer)	300	692038	Muffler ----- Note ----- 790828 Muffler Used on Type No(s). 0478, 0479, 0481, 0592, 0611, 0615, 0625, 0630, 0664, 0665, 0674.
			222C	692150	Bracket-Control (Variable Speed) (5 Postion Manual Choke)	300B	694048	Muffler (Super Lo Tone Catalyst)
			222E	692982	Bracket-Control (Manual Friction, 5 Postion Manual Choke)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

♦ Included in Carburetor Gasket Set-Ref. No. 977.

⊗ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5054-9

Assemblies include all parts shown in frames.

09/13/2007

123K00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
304	695892	Housing-Blower ----- Note ----- 493293 Housing-Blower Used on Type No(s). 0015, 0018, 0025, 0060, 0062, 0107, 0113, 0114, 0117, 0120, 0127, 0130, 0131, 0132, 0134, 0138, 0147, 0153, 0184, 0210, 0218, 0223, 0225, 0302, 0330, 0515, 0518, 0525, 0560, 0562, 0587, 0589, 0611, 0717, 3717. 493294 Housing-Blower Used on Type No(s). 0005, 0126, 0134, 0137, 0156, 0236, 0238, 0240, 0269, 0332, 0509. 696298 Housing-Blower Used on Type No(s). 0121, 0194, 0244. 790826 Housing-Blower Used on Type No(s). 0479, 0481, 0592, 0615, 0625, 0630, 0664, 0665. 790983 Housing-Blower Used on Type No(s). 0478, 0674. 694092 Housing-Blower Used on Type No(s). 0145.	309	695550	Motor-Starter (Used Before Code Date 07052900).	497	690664	Screw (Stopswitch Bracket)
			309A	795092	Motor-Starter (Used After Code Date 07052800). (Cylinder Shield)	505	691251	Nut (Governor Control Lever)
			310	692327	Bolt (Starter Motor)	510	795093	Drive-Starter
			332	690662	Nut (Flywheel)	513	692358	Clutch-Drive
			333	802574	Armature-Magneto ----- Note ----- 790817 Armature-Magneto Used on Type No(s). 0336, 0515, 0518, 0525, 0560, 0562, 0563, 0615, 0625, 0666, 0717, 3717.	523	499621	Dipstick
			334	691061	Screw (Magneto Armature)	524	★692296	Seal-Dipstick Tube
			337	802592S	Plug-Spark (Resistor) ----- Note ----- 697451 Plug-Spark (EMS)	525	495265	Tube-Dipstick
			347	691396	Switch-Rocker	529	691923	Grommet
			356	692390	Wire-Stop	544	690786	Armature-Starter
			356B	693010	Wire-Stop	545	492919	Washer Set
			356D	496381	Wire-Stop	562	92613	Bolt (Governor Control Lever)
			358	497316	Gasket Set-Engine	564	690664	Screw (Control Cover)
			363	19069	Flywheel Puller	564A	691142	Screw (Control Cover)
			365	691688	Screw (Carburetor)	564B	698589	Screw (Control Cover)
			383	89838S	Wrench-Spark Plug	578	398153	Wire Assembly
			404	690272	Washer (Governor Crank)	584	697734	Cover-Breather Passage
			425A	690670	Screw (Air Cleaner Cover)	585	★691879	Gasket-Breather Passage
			443A	692523	Screw (Air Cleaner Primer Base)	592	690800	Nut (Rewind Starter)
			445A	491588S	Filter-Air Cleaner Cartridge	597	691696	Screw (Pawl Friction Plate)
			455	791960	Cup-Flywheel	601	791850	Clamp-Hose
			456	692299	Plate-Pawl Friction	601A	691038	Clamp-Hose
			459	281505S	Plate-Ratchet	604	691757	Cover-Control
			467	790842	Knob-Air Cleaner	604A	691344	Cover-Control
			474	691991	Alternator	604B	790703	Cover-Control
						604C	792418	Cover-Control
305	691108	Screw (Blower Housing)				608	497680	Starter-Rewind
306	690450	Shield-Cylinder				613	691340	Screw (Muffler)
306A	790836	Shield-Cylinder						----- Note -----
307	690345	Screw						790833 Screw (Muffler) Used on Type No(s). 0478, 0479, 0481, 0592, 0611, 0615, 0625, 0630, 0664, 0665, 0674.
						613B	691114	Screw (Muffler)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊗ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5054-10

Assemblies include all parts shown in frames.

09/13/2007

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
615	690340	Retainer-Governor Shaft	783	691918	Gear-Pinion	921A	695886	Cover-Blower Housing
616	698801	Crank-Governor	783A	691269	Gear-Pinion	921B	692931	Cover-Blower Housing
617★◆270344		Seal-O Ring (Intake Manifold)	784	795095	Cover-Starter Gear	921C	695889	Cover-Blower Housing
621	692310	Switch-Stop	785	692352	Gasket-Starter Cover	921E	696262	Cover-Blower Housing
627	692872	Bracket-Stopswitch	789B	696547	Harness-Wiring	921F	697343	Cover-Blower Housing
		----- Note -----	801	690782	Cap-Drive	921G	790701	Cover-Blower Housing
		792565 Bracket-Stop Switch	802	695267	Cap-End	921J	790036	Cover-Blower Housing
		Used on Type No(s). 0156, 0238, 0509.	803	695266	Housing-Starter	921K	699984	Cover-Blower Housing
633 ◆◆691321		Seal-Choke/Throttle Shaft	832	499034	Guard-Muffler	921L	791026	Cover-Blower Housing
633A ◆◆693867		Seal-Choke/Throttle Shaft	832B	497683	Guard-Muffler (Super Lo Tone Catalyst)	921N	792675	Cover-Blower Housing
635	66538S	Boot-Spark Plug	836	690664	Screw (Muffler Guard)	922	691831	Spring-Brake
651	691660	Screw (Starter Gear Cover)	836B	691147	Screw (Muffler Guard)			----- Note -----
668	★493823	Spacer	842	★691031	Seal-O Ring (Dipstick Tube)			692135 Spring-Brake
670	692294	Spacer-Fuel Tank	843	691884	Sleeve-Lever (Control Bracket)			Used on Type No(s).
676	396548	Deflector-Muffler (Louvered)	843A	691895	Sleeve-Lever (Choke)			0101, 0116, 0119,
676C	493871	Deflector-Muffler (Side Out) (Extended)	847	692047	Dipstick/Tube Assembly			0122, 0123, 0124,
677	690661	Screw (Muffler Deflector)	851	493880S	Terminal-Spark Plug			0125, 0135, 0139,
684	690345	Screw (Breather Passage Cover)	853	695268	Adapter-Wire			0141, 0142, 0154,
689	691855	Spring-Friction	868	697338	Seal-Valve			0181, 0183, 0185,
692	690572	Spring-Detent	869	691155	Seat-Valve (Intake)			0193, 0195, 0196,
697	691127	Screw (Drive Cap)	870	690380	Seat-Valve (Exhaust)			0197, 0208, 0209,
718	690959	Pin-Locating	871	262001	Bushing-Valve Guide (Exhaust)			0217, 0219, 0222,
741	790345	Gear-Timing (Use Without Woodruff Key)			----- Note -----			0224, 0226, 0230,
		----- Note -----			63709 Bushing-Valve Guide			0231, 0232, 0234,
		691830 Gear-Timing (Uses Woodruff Key)			(Intake)			0235, 0237, 0239,
742	93941	Retainer-E Ring	883 ★Ø691881		Gasket-Exhaust			0243, 0258, 0261,
745	691648	Screw (Brake)	910	691094	Stud (Alternator)			0266, 0267, 0268,
								0271, 0277, 0281,
								0283, 0289, 0301,
								0306, 0307, 0309,
								0311, 0312, 0313,
								0314, 0315, 0324,
								0326, 0327, 0328,
								0329, 0336, 0337,
								0338, 0347, 0350,
								0357, 0424, 0425,
								0438, 0440, 0444,
								0447, 0450, 0454,
								0456, 0479, 0481,
								0484, 0490, 0498,
								0501, 0507, 0508,
								0511, 0513, 0541,
								0547, 0563, 0564,
								0576, 0582, 0592,
								0609, 0613, 0615,
								0618, 0625, 0630,
								0631, 0639, 0657,
								0664, 0665, 0666.

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

123K00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
923	691994	Brake ----- Note ----- 695891 Brake Used on Type No(s). 0101, 0116, 0119, 0122, 0123, 0124, 0125, 0135, 0139, 0141, 0142, 0154, 0181, 0183, 0185, 0193, 0195, 0196, 0197, 0208, 0209, 0217, 0219, 0222, 0224, 0226, 0230, 0231, 0232, 0234, 0235, 0237, 0239, 0243, 0258, 0261, 0266, 0267, 0268, 0271, 0277, 0281, 0283, 0289, 0301, 0306, 0307, 0309, 0311, 0312, 0313, 0314, 0315, 0324, 0326, 0327, 0328, 0329, 0336, 0337, 0338, 0347, 0350, 0357, 0424, 0425, 0438, 0440, 0444, 0447, 0450, 0454, 0456, 0479, 0481, 0484, 0490, 0498, 0501, 0507, 0508, 0511, 0513, 0541, 0547, 0563, 0564, 0576, 0582, 0592, 0609, 0613, 0615, 0618, 0625, 0630, 0631, 0639, 0657, 0664, 0665, 0666.	930	691919	Guard-Rewind (Round)	1019	494256	Kit-Label ----- Note -----
			930A	691345	Guard-Rewind (Tear Drop)			790231 Kit-Label (Touch N Mow)
			935	499421	Switch-Interlock	1036		Label-Emissions (Available From A Briggs & Statton Authorized Dealer)
			937	691325	Spline-Starter	1058	277039	Operator's Manual ----- Note -----
			957A	692046	Cap-Fuel Tank (Plastic)			277101 Operator's Manual (Touch N Mow)
			957B	699985	Cap-Fuel Tank (Plastic)	1059	692311	Kit-Screw/Washer ----- Note -----
			966A	496116	Base-Air Cleaner Primer			696293 Kit-Screw/ Washer (Touch N Mow)
			966B	792040	Base-Air Cleaner Primer	1095	498528	Gasket Set-Valve
			967A	493537S	Filter-Pre Cleaner	1119	692979	Screw (Alternator)
			968B	692298	Cover-Air Cleaner	1160	690345	Screw (Interlock Switch)
			969	690700	Screw (Blower Housing Cover)	1210	498144	Pulley/Spring Assembly (Pulley)
			969A	691138	Screw (Blower Housing Cover)	1211	498144	Pulley/Spring Assembly (Spring)
			970	691669	Screw (Air Cleaner Primer Bracket)	1236	695959	Starter-Machanical (Touch N Mow) (Do Not Service Individual Parts, Only As A Whole)
			972	699392	Tank-Fuel (Plastic)	1319	794467	Label-Warning
			972B	699374	Tank-Fuel (Plastic)	1330	270962	Manual-Repair
					----- Note ----- 699387 Tank-Fuel (Plastic) Used on Type No(s). 0121, 0194, 0244.	1386	790848	Vane-Air (Autochoke System)
			975	493640	Bowl-Float	1387	790849	Spring-Air Vane
			976	694395	Primer-Carburetor	1388	790850	Screw (Air Vane)
			977	498261	Gasket Set-Carburetor			
			990A	695951	Key Set			
925	690595	Cover-Linkage	1005	691346	Fan-Flywheel			
			1009	696255	Screw (Starter Motor)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊗ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5054-12

Assemblies include all parts shown in frames.

09/13/2007