

**91400**

# Illustrated Parts List

## Model Series

# 91400

TYPE NUMBERS  
0120, 0130.

### TABLE OF CONTENTS








Air Cleaner .....	6
Blower Housing .....	7
Blower Housing/Rewind #1 .....	8
Blower Housing/Rewind #2 .....	9
Cams .....	2
Carburetor .....	4
Controls .....	5
Crankcase Cover/Sump .....	3
Crankshaft .....	2
Cylinder .....	2
Flywheel .....	7
Fuel Tank .....	4
Gear Reducer .....	9
Governor Spring .....	5
Head .....	2
Ignition .....	5
Kits/Gaskets-Carburetor .....	4
Kits/Gaskets-Valve/Engine .....	2
Muffler .....	6
Oil .....	3
Piston Group .....	2
Rewind .....	7
Valves .....	2

PRINTED IN U.S.A.







COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

# 91400

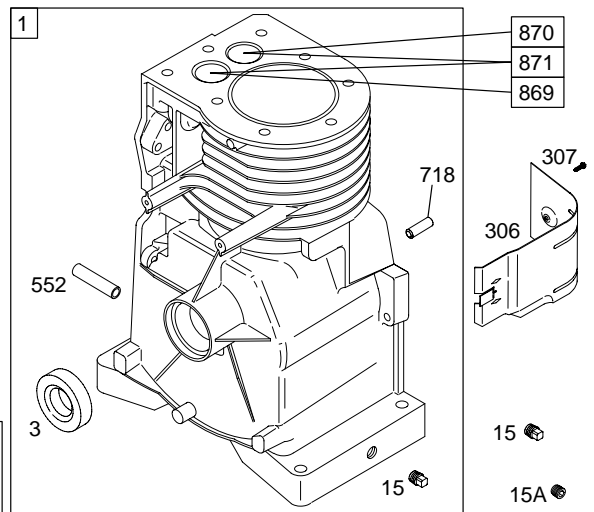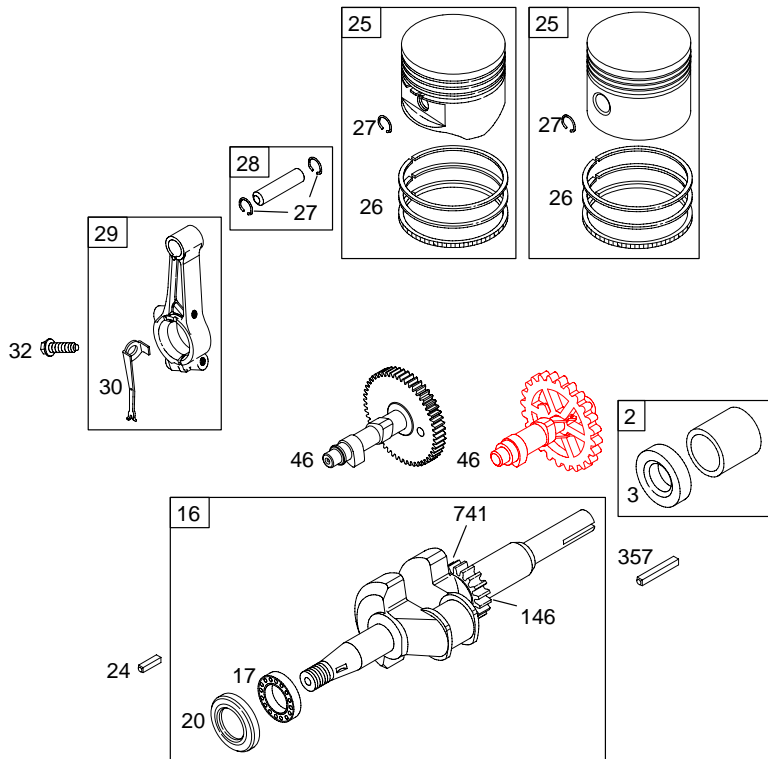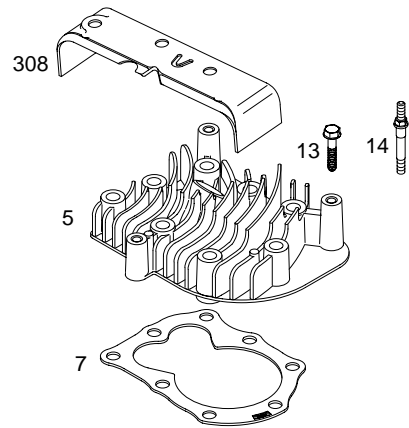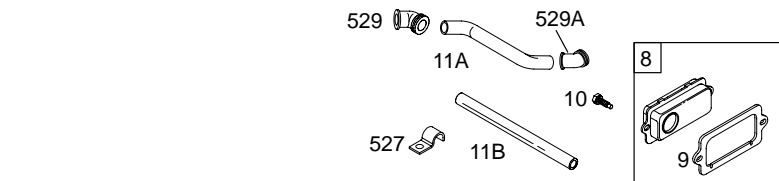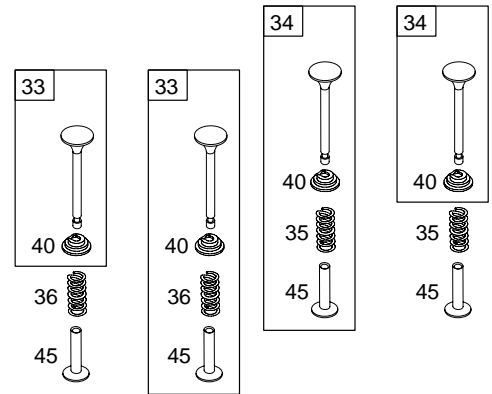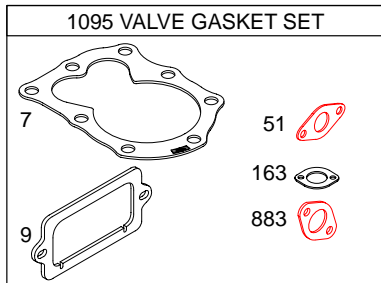
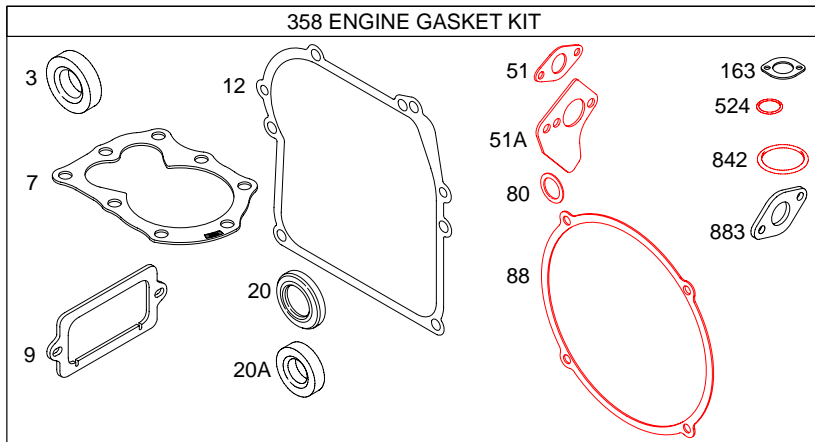


1019 LABEL KIT  
1058 OWNER'S MANUAL











Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
7152-2 Assemblies include all parts shown in frames. 6/26/2003

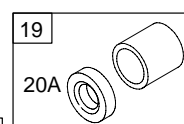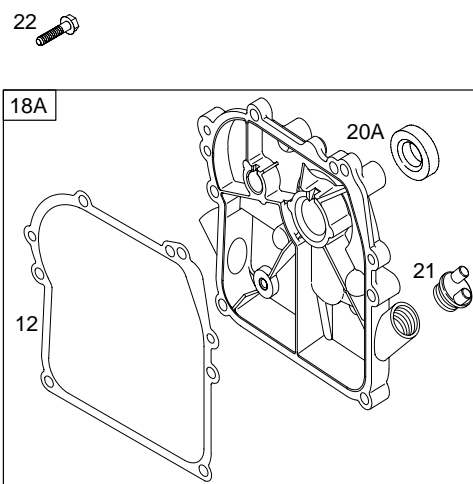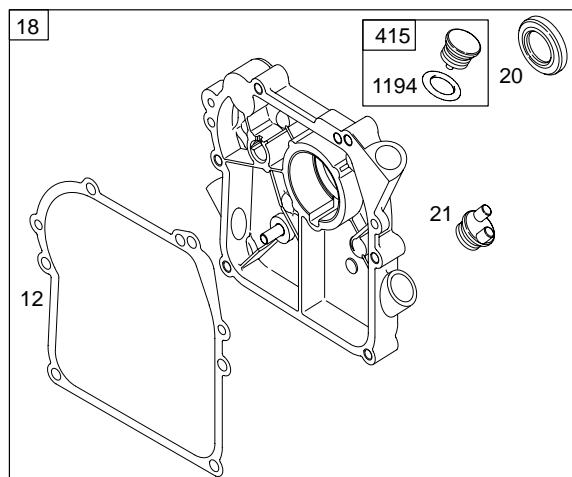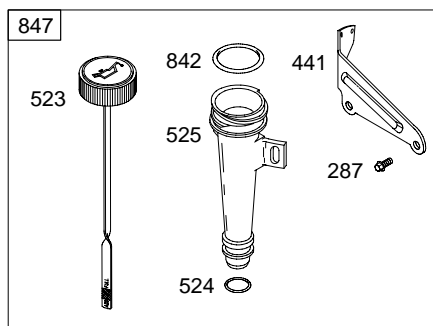


7152-3 *Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.* Assemblies include all parts shown in frames. 6/26/2003

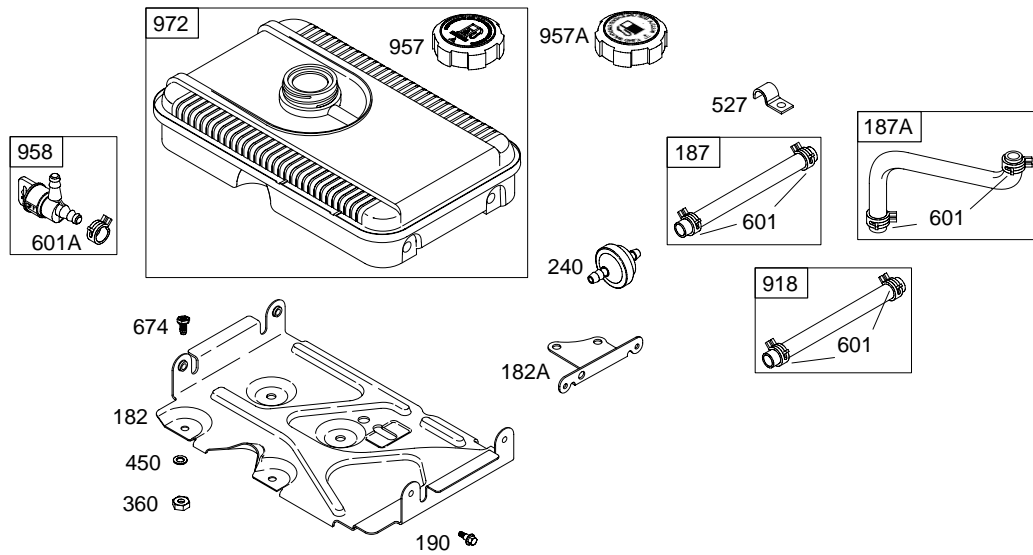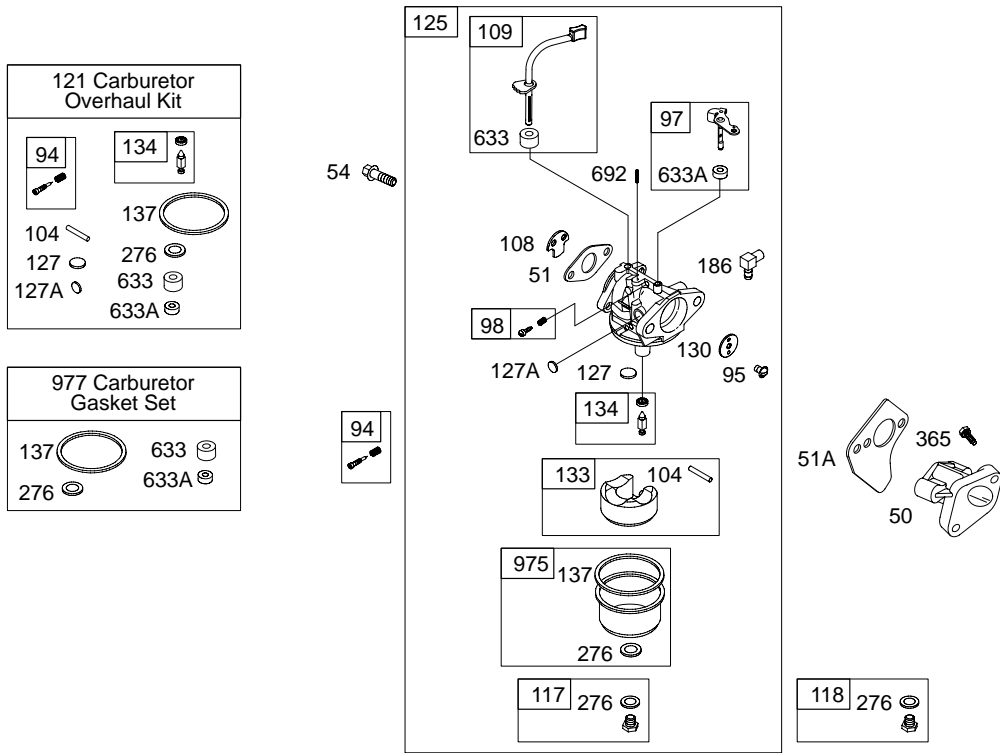

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*

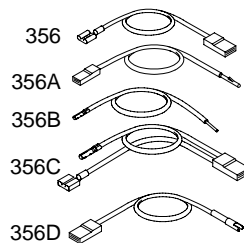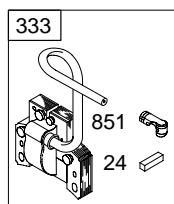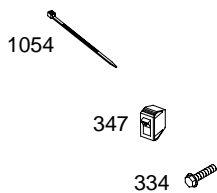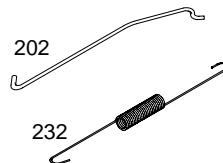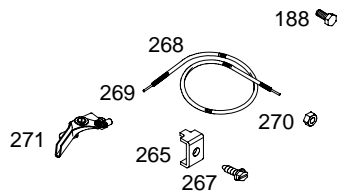
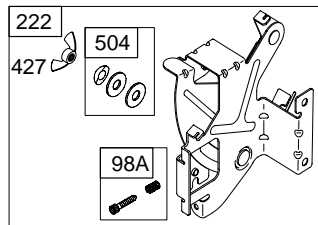

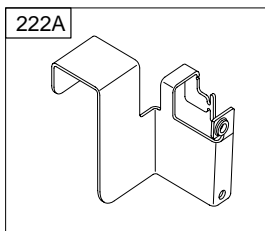


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
7152-5 Assemblies include all parts shown in frames. 6/26/2003


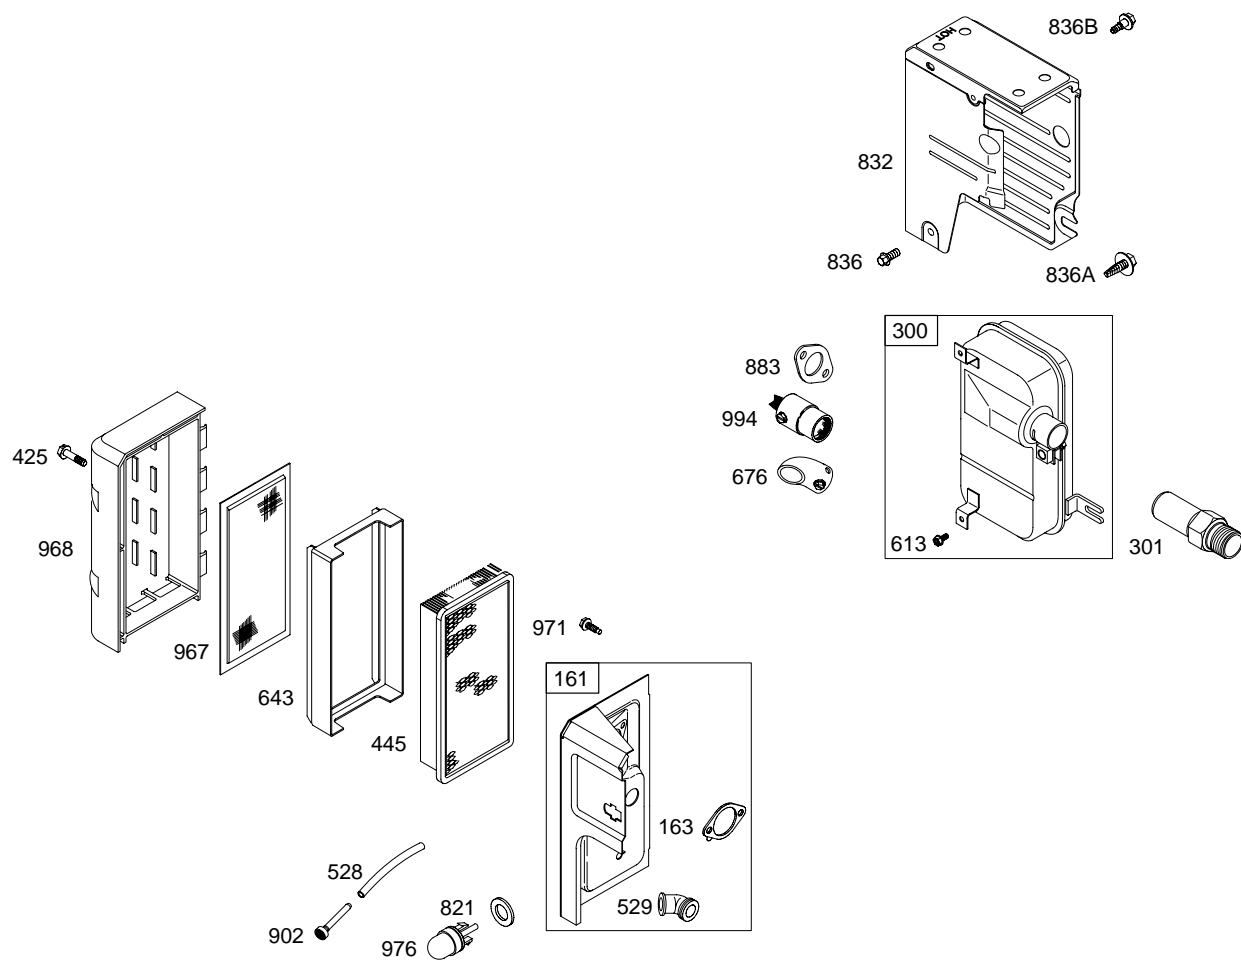


*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*

1036 Emission Label

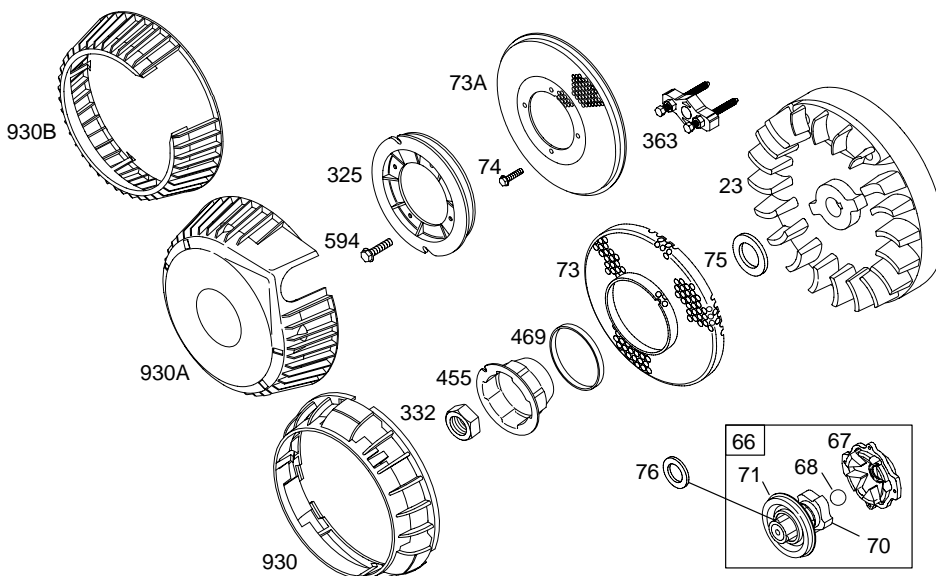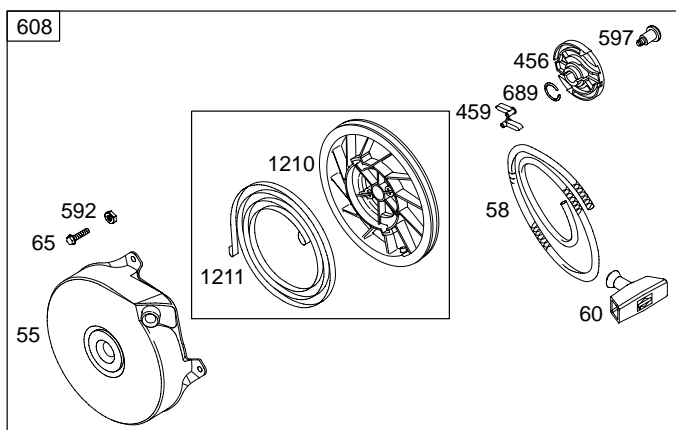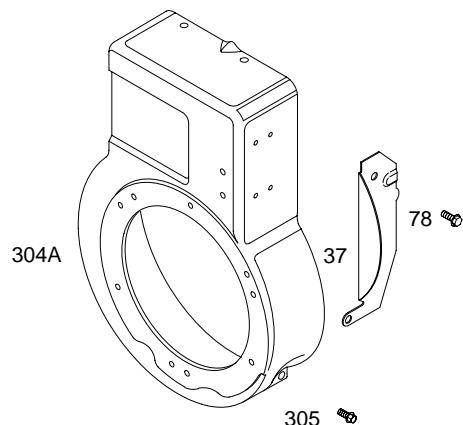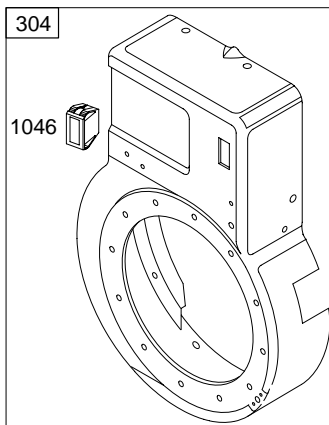


7152-7 *Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.* Assemblies include all parts shown in frames. 6/26/2003

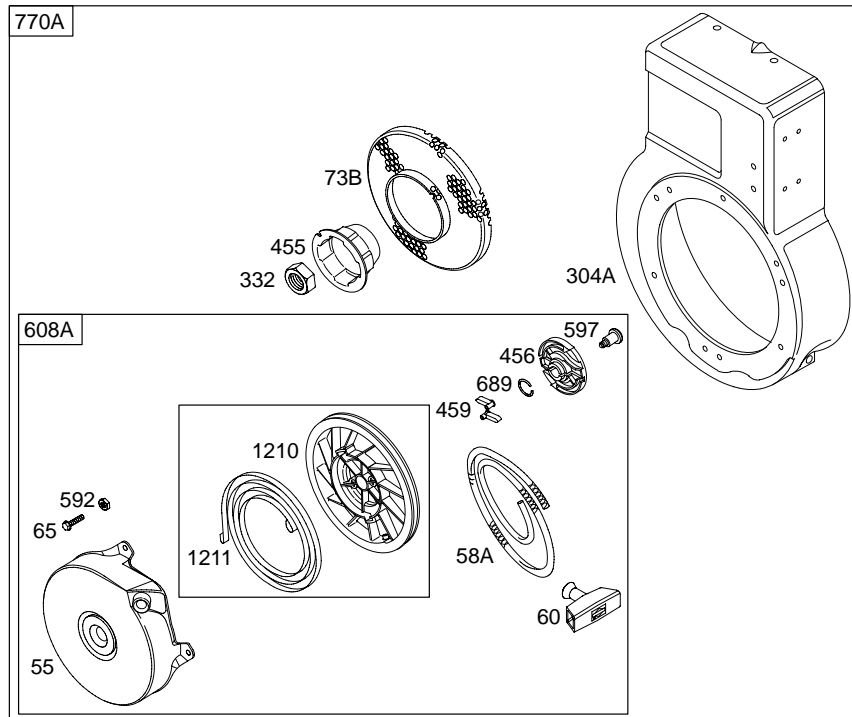
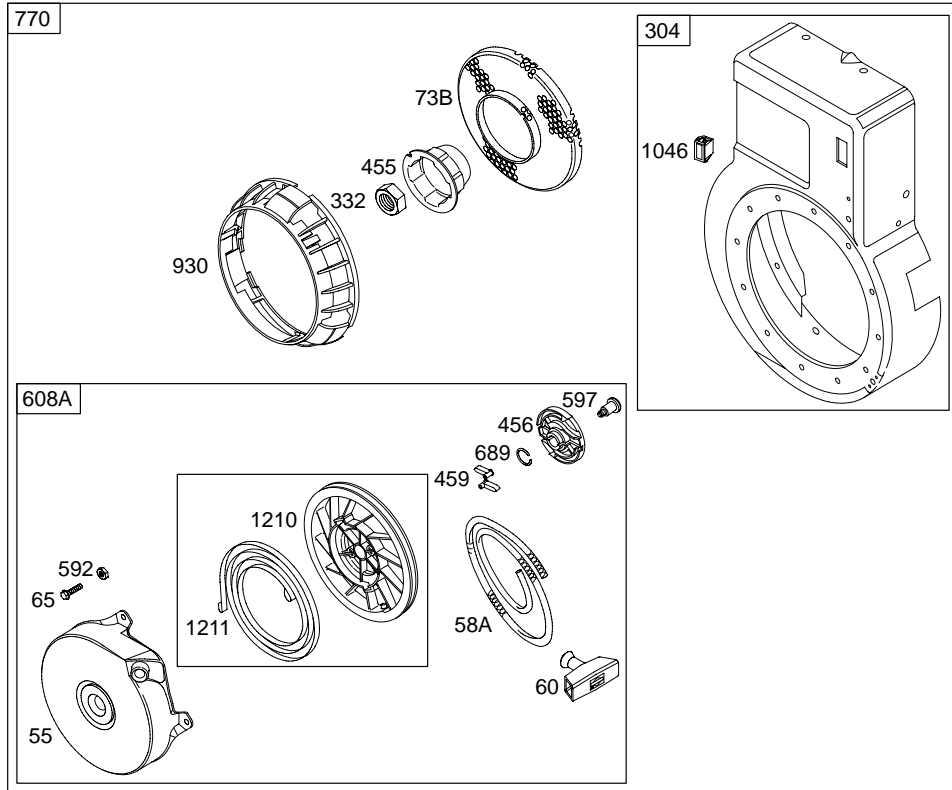


*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*  
 7152-8 Assemblies include all parts shown in frames. 6/26/2003



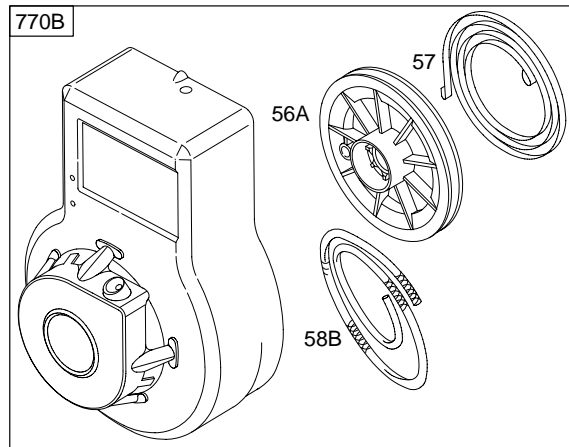

305

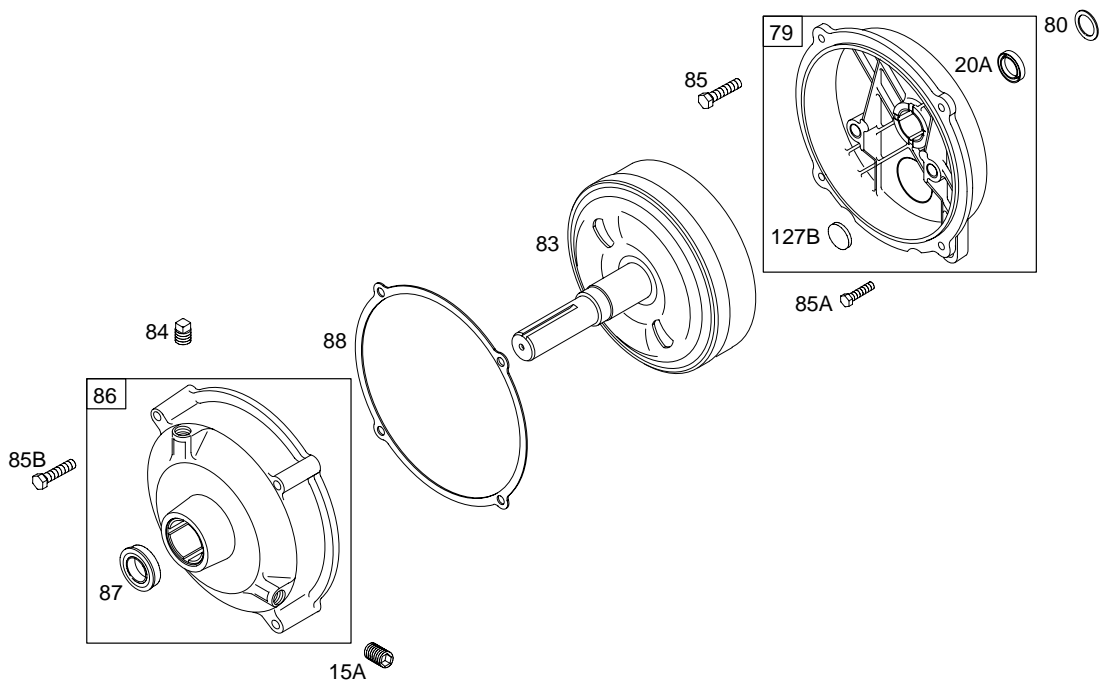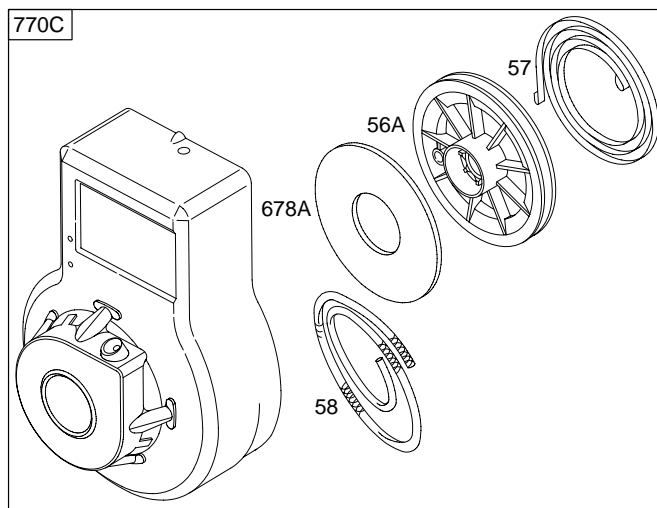

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 7152-9 Assemblies include all parts shown in frames. 6/26/2003

# 91400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	694161	Cylinder Assembly	24	222698	Key-Flywheel	37	690463	Guard-Flywheel
2	399269	Kit -Bushing/Seal (Magneto Side)	25	498668	Piston Assembly (Standard)	40	692194	Retainer-Valve
3	★299819	Seal-Oil (Magneto Side)			———— Note ———	45	691762	Tappet-Valve
5	690386	Head-Cylinder		498669	Piston Assembly (.010" Oversize)	46	691998	Camshaft
7	★∅692288	Gasket-Cylinder Head		498670	Piston Assembly (.020" Oversize)	50	691922	Manifold-Intake
8	495774	Breather Assembly		498671	Piston Assembly (.030" Oversize)	51	★∅692283	Gasket-Intake
9	★∅27549	Gasket-Breather				51A	★273113	Gasket-Intake
10	691666	Screw (Breather Assembly)				54	691689	Screw (Intake Manifold)
11A	691246	Tube-Breather				55	692144	Housing-Rewind Starter
12	★692218	Gasket-Crankcase (.015" Standard)	26	695169	Ring Set (Standard)	58	691921	Rope-Starter (Cut to Required Length)
		———— Note ———			———— Note ———	60	691915	Grip-Starter Rope
		★270895 Gasket-Crankcase (.005")		695171	Ring Set (.010" Oversize)	65	690837	Screw (Rewind Starter)
		★270896 Gasket-Crankcase (.009")		695172	Ring Set (.020" Oversize)	73	694018	Screen-Rotating
		693732 Screw		695173	Ring Set (.030" Oversize)	78	690364	Screw (Flywheel Guard)
13	691640	Screw (Cylinder Head)	27	691588	Lock-Piston Pin	95	691636	Screw (Throttle Valve)
14	690361	Stud (Used in Number 4, 6 and 8 Positions)	28	298909	Pin-Piston (Standard)	97	496861	Shaft-Throttle
					———— Note ———	98	398185	Kit-Idle Speed (Carburetor)
15	691686	Plug-Oil Drain		298908	Pin-Piston (.005" Oversize)	98A	493280	Kit-Idle Speed (Control Bracket)
16	399006	Crankshaft	29	294367	Rod-Connecting (Standard)	104	●691242	Pin-Float Hinge
18A	496903	Cover-Crankcase			———— Note ———	108	692567	Valve-Choke
19	★691356	Seal-Oil (PTO Side)		296079	Rod-Connecting (.020" Undersize)	109	496860	Shaft-Choke
20A	★299819	Seal-Oil (PTO Side)				117	498981	Jet-Main (Standard)
21	281658	Cap-Oil Fill	30	691719	Dipper-Connecting Rod	118	494870	Jet-Main (High Altitude)
22	691129	Screw (Crankcase Cover)	32	691664	Screw (Connecting Rod)	121	498260	Kit-Carburetor Overhaul
		———— Note ———	33	497871	Valve-Exhaust	125	496863	Carburetor
		693732 Screw (Crankcase Cover) (Used in Positions No. 1 and 6)	34	296677	Valve-Intake	127	●691739	Plug-Welch
23	692009	Flywheel	35	690520	Spring-Valve (Intake)	130	691181	Valve-Throttle
			36	690520	Spring-Valve (Exhaust)	133	398187	Float-Carburetor
						134	●398188	Kit-Needle/Seat
						137	●◆693981	Gasket-Float Bowl

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
146	499047	Key—Timing (Timing Gear)	333	496914	Armature—Magneto	633	◆◆693867	Seal—Choke/Throttle Shaft (Choke)
161	691393	Base—Air Cleaner	334	691061	Screw (Magneto Armature)	633A	◆◆691321	Seal—Choke/Throttle Shaft (Throttle)
163	★∅272948	Gasket—Air Cleaner	337	802592	Spark Plug	635	66538	Boot—Spark Plug
186	692317	Connector—Hose	356D	696030	Wire—Stop	643	691908	Retainer—Air Filter
188	691637	Screw (Control Bracket)	358	496865	Gasket Set—Engine	689	691855	Spring—Friction
202	692351	Link—Mechanical Governor	363	19069	Puller—Flywheel	692	690572	Spring—Detent
209	691858	Spring—Governor (Yellow)	365	691688	Screw (Carburetor)	718	690959	Pin—Locating (Cylinder)
219	496786	Gear—Governor	383	89838	Wrench—Spark Plug	741	691805	Gear—Timing
220	691724	Washer (Governor Gear)	404	691691	Washer (Governor Crank)	851	493880	Terminal—Sparkplug
222	691411	Bracket—Control	425	690670	Screw (Air Cleaner Cover)	869	691701	Seat—Valve (Intake)
222A	698681	Bracket—Control	427	690355	Nut (Control Bracket)	870	691702	Seat—Valve (Exhaust)
227	691412	Lever—Governor Control	445	494511	Filter—Air Cleaner Cartridge	871	262001	Bushing—Valve Guide
232	691846	Spring—Governor Link	455	691236	Cup—Flywheel	967	492889	Filter—Pre Cleaner
265	691024	Clamp—Casing	456	692299	Plate—Pawl Friction	968	691327	Cover—Air Cleaner
267	690804	Screw (Casing Clamp)	459	281505	Pawl—Ratchet	971	690370	Screw (Air Cleaner Base)
268	691072	Casing—Control Wire (Cut To Required Length)	469	694420	Ring—Rotating Trim	975	493640	Bowl—Float
269	691589	Wire—Control (Cut To Required Length)	504	495659	Washer Set—Friction (Control Bracket)	977	498261	Gasket Set— Carburetor
270	691027	Nut (Control Wire Casing)	505	691251	Nut (Governor Control Lever)	1019	496905	Label Kit
271	691028	Lever—Control	529	692187	Grommet (Breather)	1036	696765	Label—Emission (Used After Code Date 01093000).
276	◆◆271716	Washer—Sealing (Float Bowl)	552	690508	Bushing—Governor Crank	———— <b>Note</b> ————		
304A	694144	Housing—Blower	562	92613	Bolt (Governor Control Lever)	695098	Label— Emission (Used Before Code Date 01100100).	
305	692198	Screw (Blower Housing)	592	690800	Nut (Rewind Starter)	1058	274261	Owner's Manual
306	690461	Shield—Cylinder	597	691696	Screw (Pawl Friction Plate)	1095	498525	Gasket Set—Valve
307	691660	Screw (Cylinder Shield)	608	499706	Starter—Rewind	1210	499901	Pulley/Spring Assembly (Pulley)
308	690462	Cover—Cylinder Head (Timing Gear)	614	691620	Pin—Cotter	1211	499901	Pulley/Spring Assembly (Spring)
332	690662	Nut (Flywheel)	616	692016	Crank—Governor			

★ Included in Engine Gasket Set—Ref. No. 358.

● Included in Carburetor Overhaul Kit—Ref. No. 121.

◆ Included in Carburetor Gasket Set—Ref. No. 977.

∅ Included in Valve Gasket Set—Ref. No. 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*