BRIGGS & STRATTON

ELITE Series™
PORTABLE GENERATORS

Illustrated Parts List

Questions? Help is just a moment away!
Call: **Generator Helpline**
1-800-743-4115 M-F 8-5 CT
web: www.briggsandstratton.com

030239 (2000W)

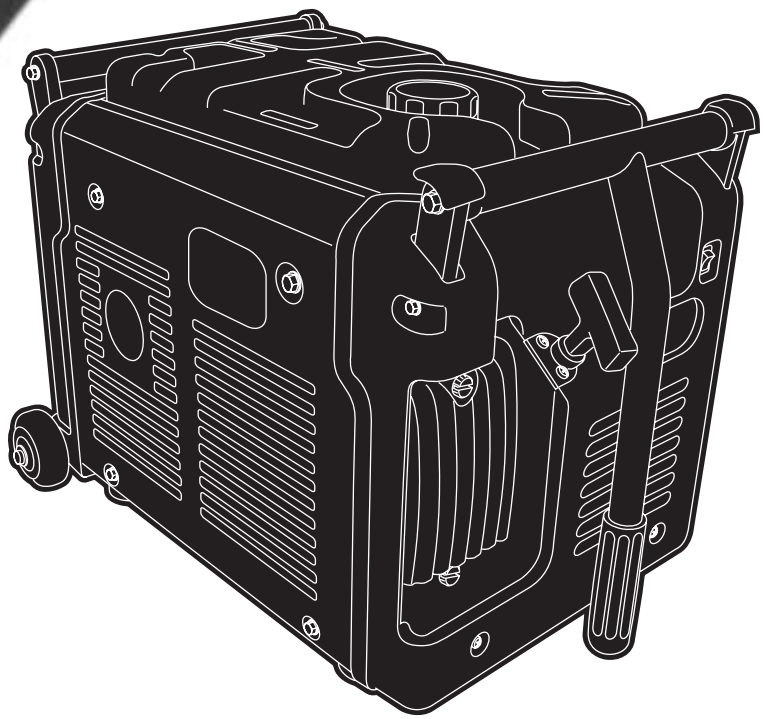

BRIGGS & STRATTON POWER PRODUCTS GROUP, LLC
JEFFERSON, WISCONSIN, U.S.A.

Manual No. 197561AGS
Revision 1 (03/03/2006)

EXPLODED VIEW - MAIN UNIT

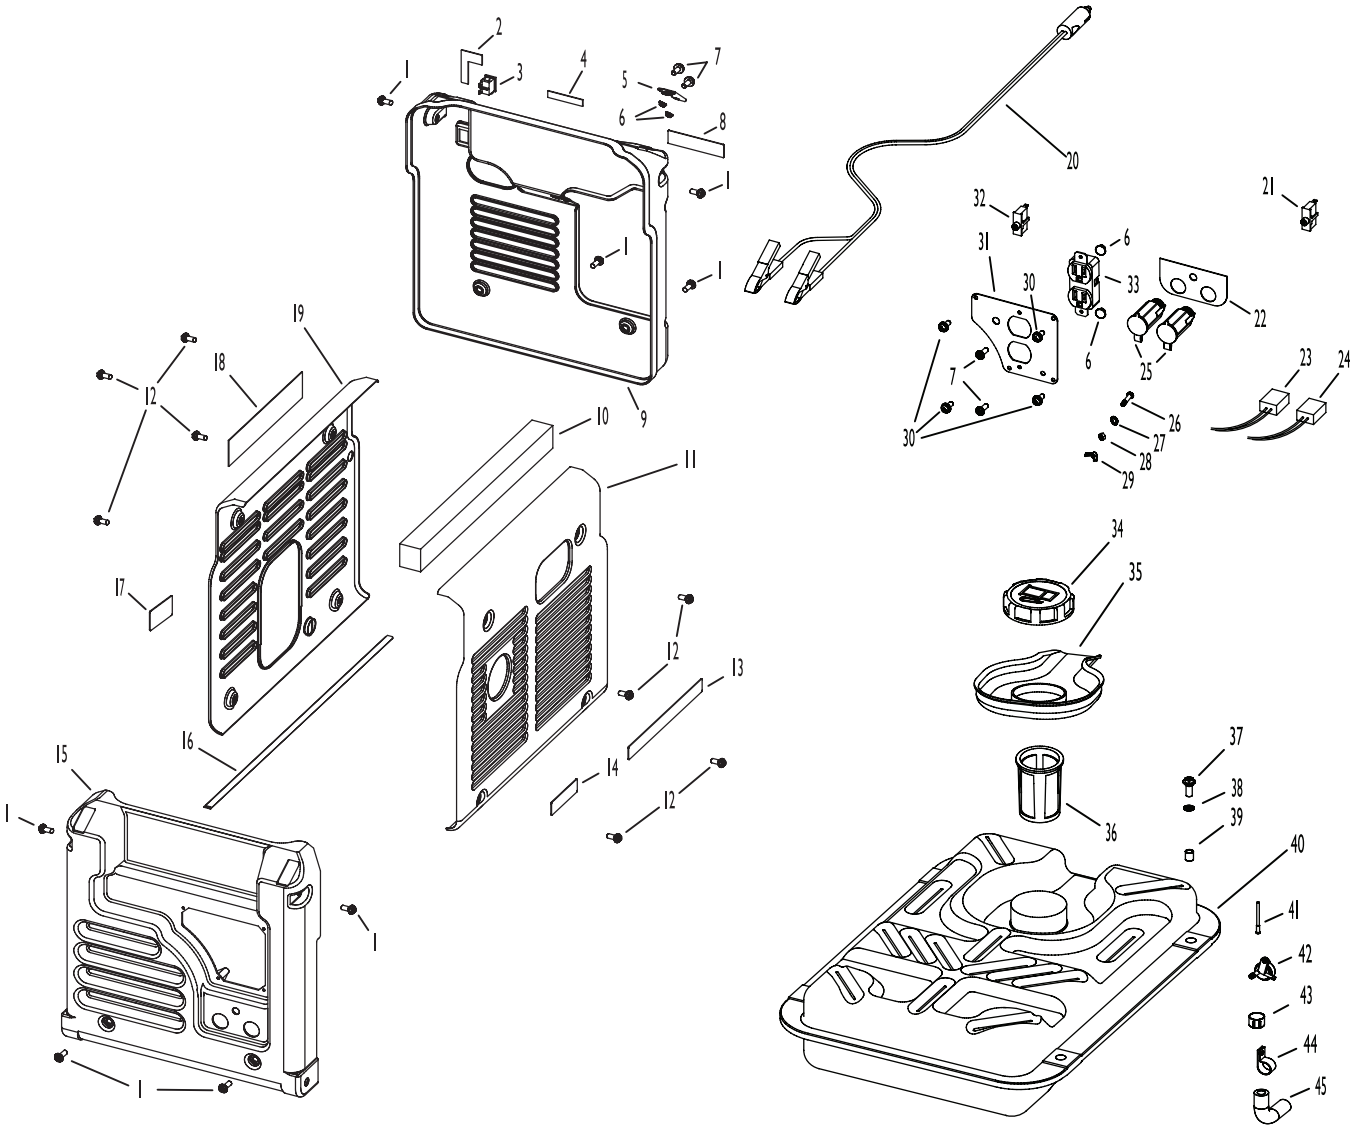

Copyright © 2006 Briggs & Stratton Power Products Group, LLC. All rights reserved. No part of this material may be reproduced or transmitted in any form by any means without the express written permission of Briggs & Stratton Power Products Group, LLC.

EXPLODED VIEW - MAIN UNIT

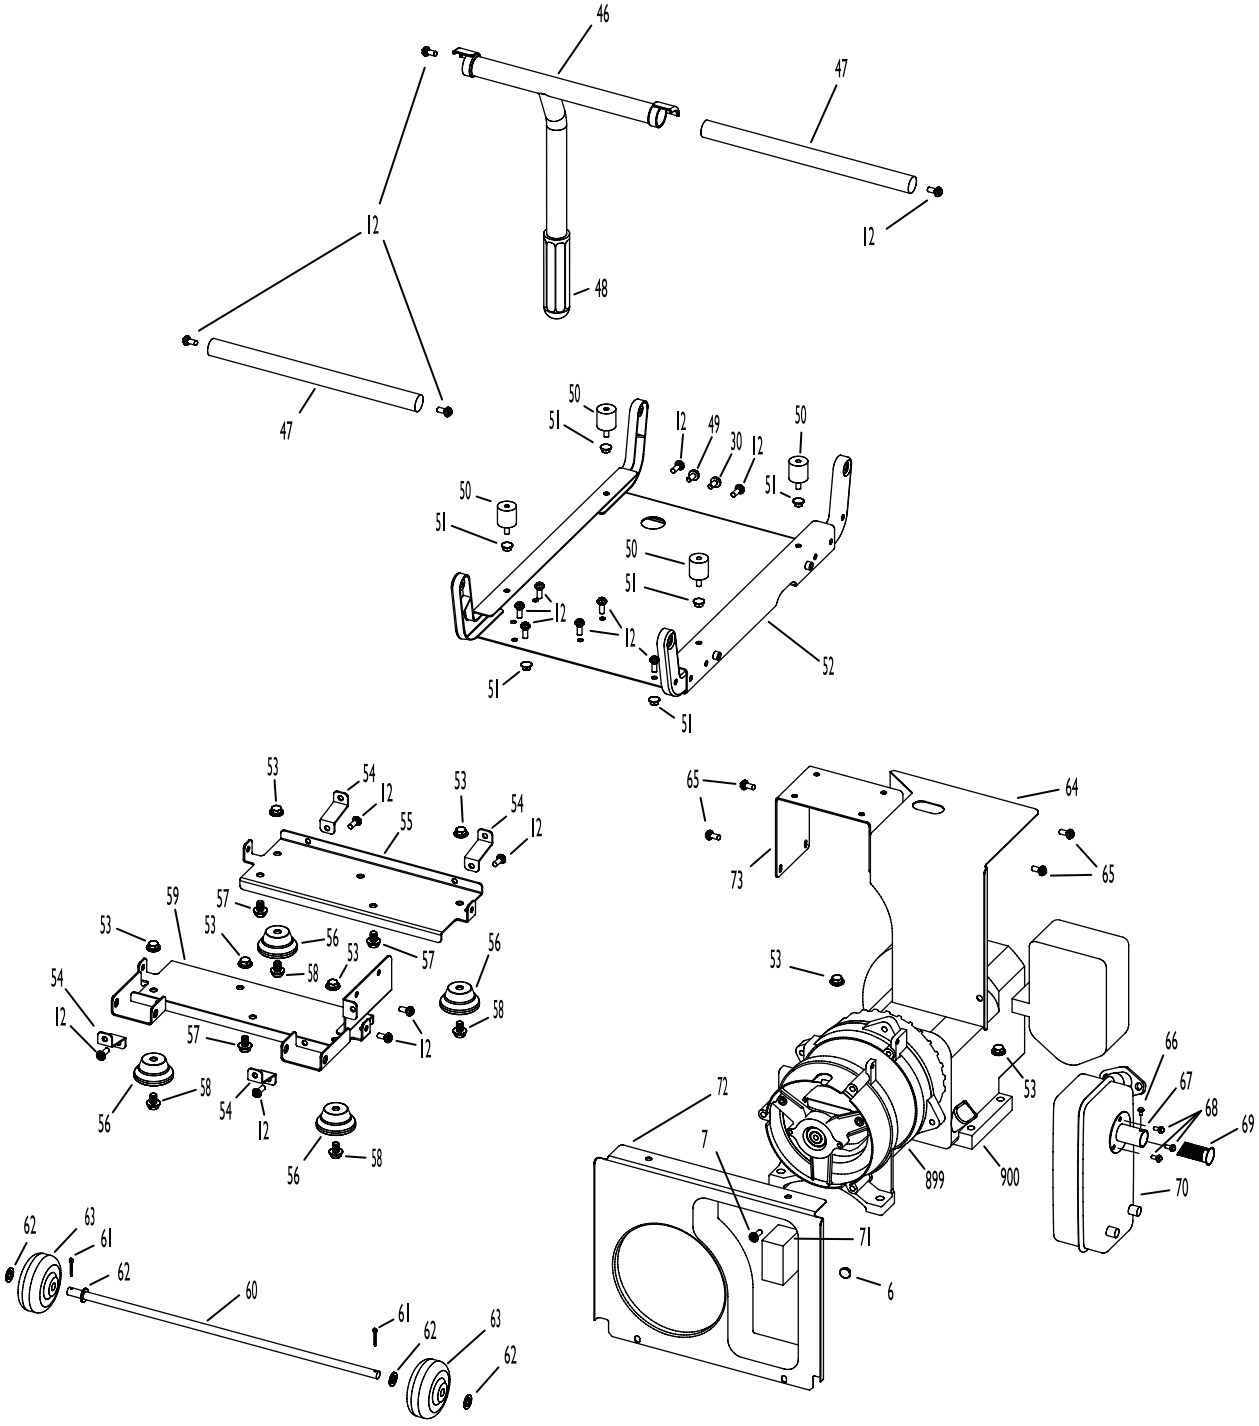

PARTS LIST - MAIN UNIT

Item	Part #	Description
1	187757GS	BOLT, CVR, MFFLR
2	197871GS	DECAL, ON-OFF
3	187450GS	SWITCH, ENG, ON/OFF
4	187766GS	DECAL, CHOKE
5	197843GS	SPPRT, RECOIL
6	187761GS	NUT, M4, FLNG
7	187760GS	SCREW, M4X12
8	191545GS	DECAL, FUEL SHUTOFF, 4-L, CCW
9	197829GS	PNL, END, RECOIL
10	197882GS	FILLER, FOAM
11	197831GS	PNL, SIDE, MFFLR
12	197860GS	BOLT, M6X16
13	197872GS	DECAL, SPECS
14	191436GS	DECAL, CAUTION, HOT MFFLR, 4 LANG
15	197828GS	PNL, END, CNTRL
16	197881GS	U-PACKING
17	187763GS	DECAL, CAUTION, OIL
18	197870GS	DECAL, UNIT
19	197830GS	PNL, SIDE, OIL
20	187876GS	CABLE, BTTRY CHARGE, ACC PLUG
21	187460GS	BRKR, CRCT, 10A, 125V
22	197873GS	DECAL, DC OUT
23	197875GS	CNNCTR
24	197876GS	CNNCTR
25	187873GS	OUTLET, 12V DC, ACCSSRY
26	187415GS	PHMS, M5-0.8 X 20
27	197874GS	WSHR, LCK, INTRNL
28	187423GS	NUT, M5 X 0.8
29	187424GS	NUT, WING, M5 X 0.8
30	197863GS	SCREW, M4X12, SLFTAP
31	197854GS	PNL, CNTRL
32	197855GS	BRKR, CRCT, 15A, 125V
33	187456GS	RCPTCL, 15 A, 125 V
34	187436GS	CAP, FUEL
35	197883GS	PACKING, TANK
36	187438GS	STRAINER, FUEL
37	197864GS	BOLT, M6X20, FLNG
38	197866GS	WSHR, FLAT
39	197865GS	SLEEVE
40	197832GS	TANK, FUEL
41	187440GS	FLTR, FUEL
42	187443GS	VLV, FUEL
43	187579GS	CLIP, HOSE
44	197845GS	CLIP, NYLN
45	197844GS	HOSE, FUEL
46	197834GS	HNDL
47	197835GS	HNDL, TUBE
48	197867GS	GRIP, HNDL
49	197862GS	SCREW
50	197838GS	MNT, VBRTN, TANK
51	197861GS	NUT, M6, FLNG
52	200231GS	ASSY, HTSHLD, TANK
53	187401GS	NUT, M8, FLNG
54	197848GS	BRCKT, PNL
55	197846GS	BASE, ENG
56	197851GS	MNT, VBRTN
57	197857GS	BOLT, M8X35, FLNG
58	197858GS	BOLT, M8X16, FLNG
59	200230GS	ASSY, BASE, ALT
60	197852GS	AXLE
61	197869GS	PIN
62	197868GS	WSHR, FLAT
63	197853GS	WHL
64	197839GS	HTSHLD, MFFLR
65	197859GS	BOLT, M5X12, FLNG
66	197880GS	SCREW, M3-8, SLFTAP
67	197878GS	PIPE, TAIL
68	197879GS	SCREW, M4X16
69	197877GS	ARRSTR, SPARK
70	197842GS	MFFLR
71	197856GS	CONDENSOR, 350V
72	197841GS	HTSHLD, ALT
73	197840GS	BRCKT, HTSHLD
899		ALTERNATOR (See page 5)
900		ENGINE (See pages 6-8)

Parts Not Illustrated

197561GS	MANUAL, Owners
BB3061BGS	BOTTLE, Oil

EXPLODED VIEW AND PARTS LIST - ALTERNATOR

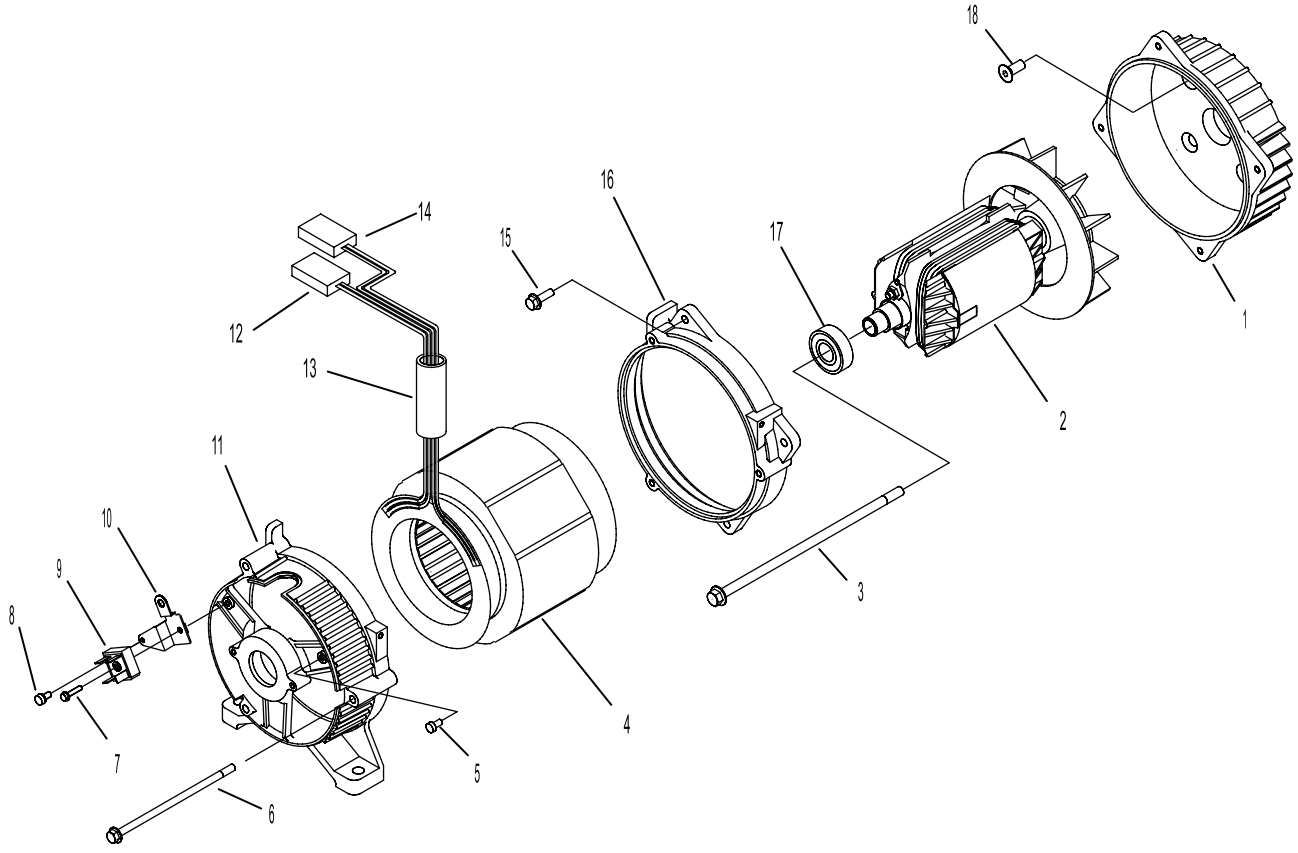

Item	Part #	Description
1	197889GS	ADPTR, ENG
2	197890GS	ASSY, ROTOR
3	197891GS	BOLT, ROTOR
4	197892GS	ASSY, STATOR
5	197893GS	SCREW, M5 X 8
6	197894GS	BOLT, STATOR
7	197895GS	SCREW, M4 X 18
8	197896GS	SCREW, M5 X 10
9	187462GS	RECTIFIER

Item	Part #	Description
10	197897GS	BRCKT, RCTFR
11	197898GS	RBC
12	197899GS	CNNCTR
13	197900GS	SLEEVE
14	197901GS	CNNCTR
15	197902GS	SCREW, M6 X 20
16	197903GS	ADPTR, MNTNG, ALT
17	187411GS	BRNG
18	197904GS	SCREW, M8 X 20

EXPLODED VIEW - ENGINE

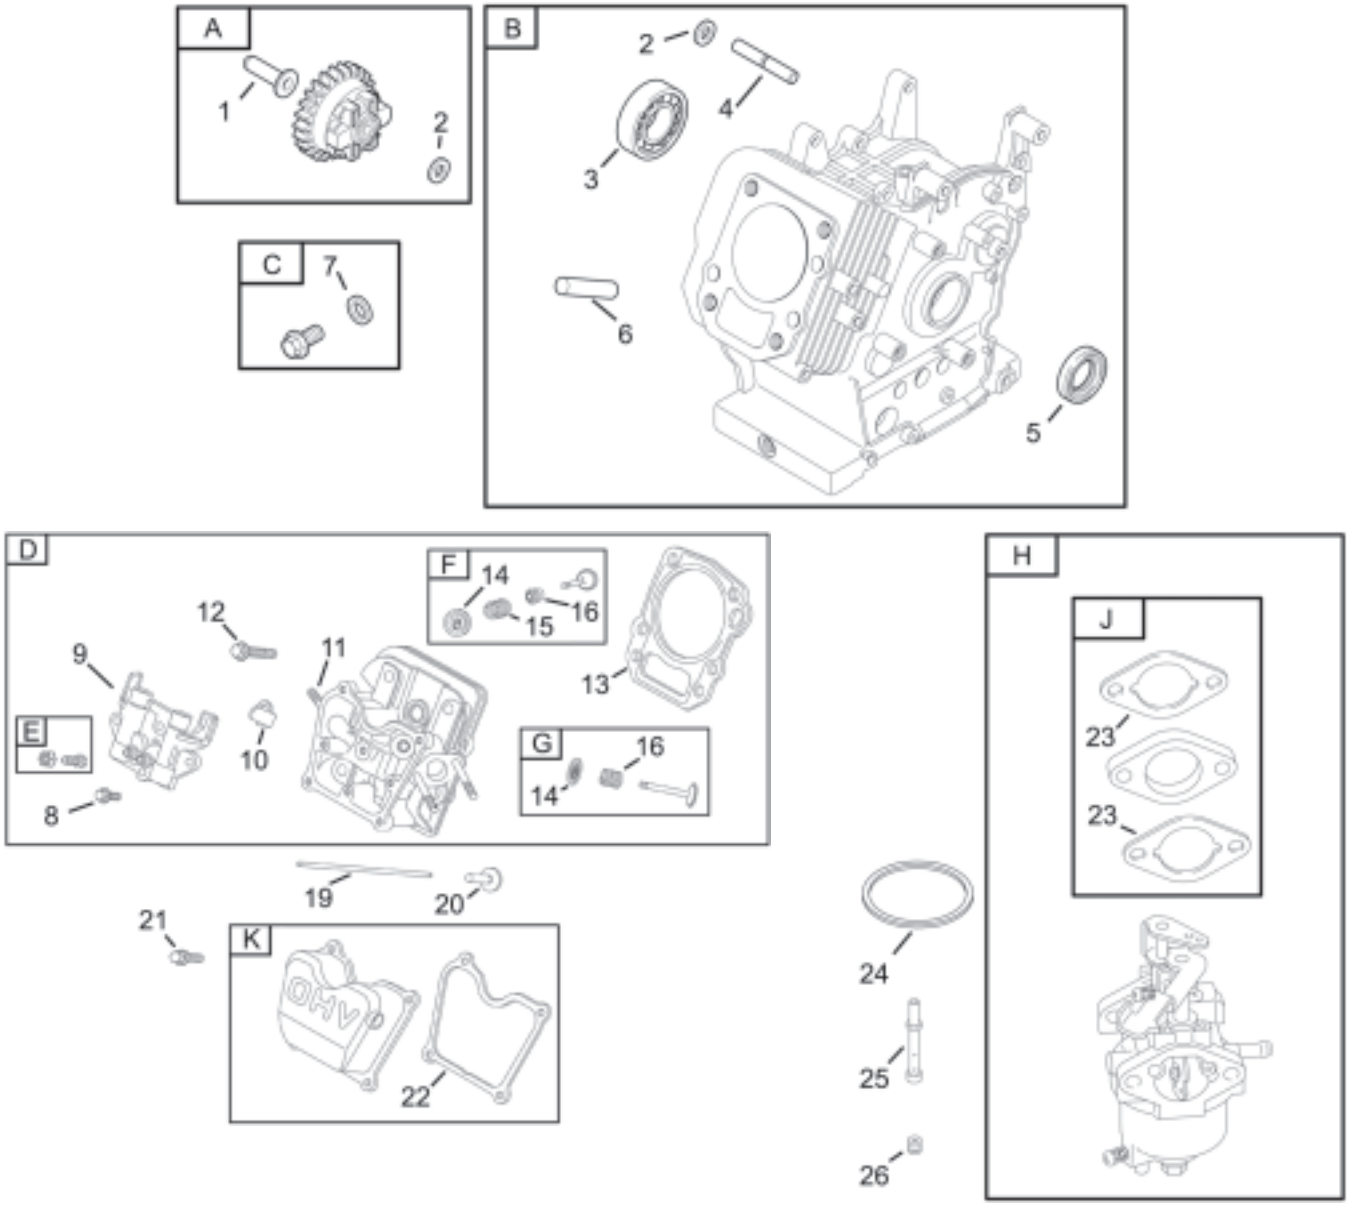

Item	Part #	Description
1	710027	CUP-GOVERNOR
2	710545	WASHER
3	711728	BEARING-BALL
4	710028	SHAFT-GOV GEAR
5	197983GS	SEAL-OIL
6	710005	PIN-LOCATING
7	711188	WASHER

Item	Part #	Description
8	710234	SCREW
9	197984GS	ARM - ROCKER (Incl E)
10	711731	PLATE - VALVE SPRING
11	710148	STUD
12	710020	SCREW
13	711732*	GASKET-CYLINDER HD
14	711086	RETAINER-VALVE

EXPLODED VIEW - ENGINE

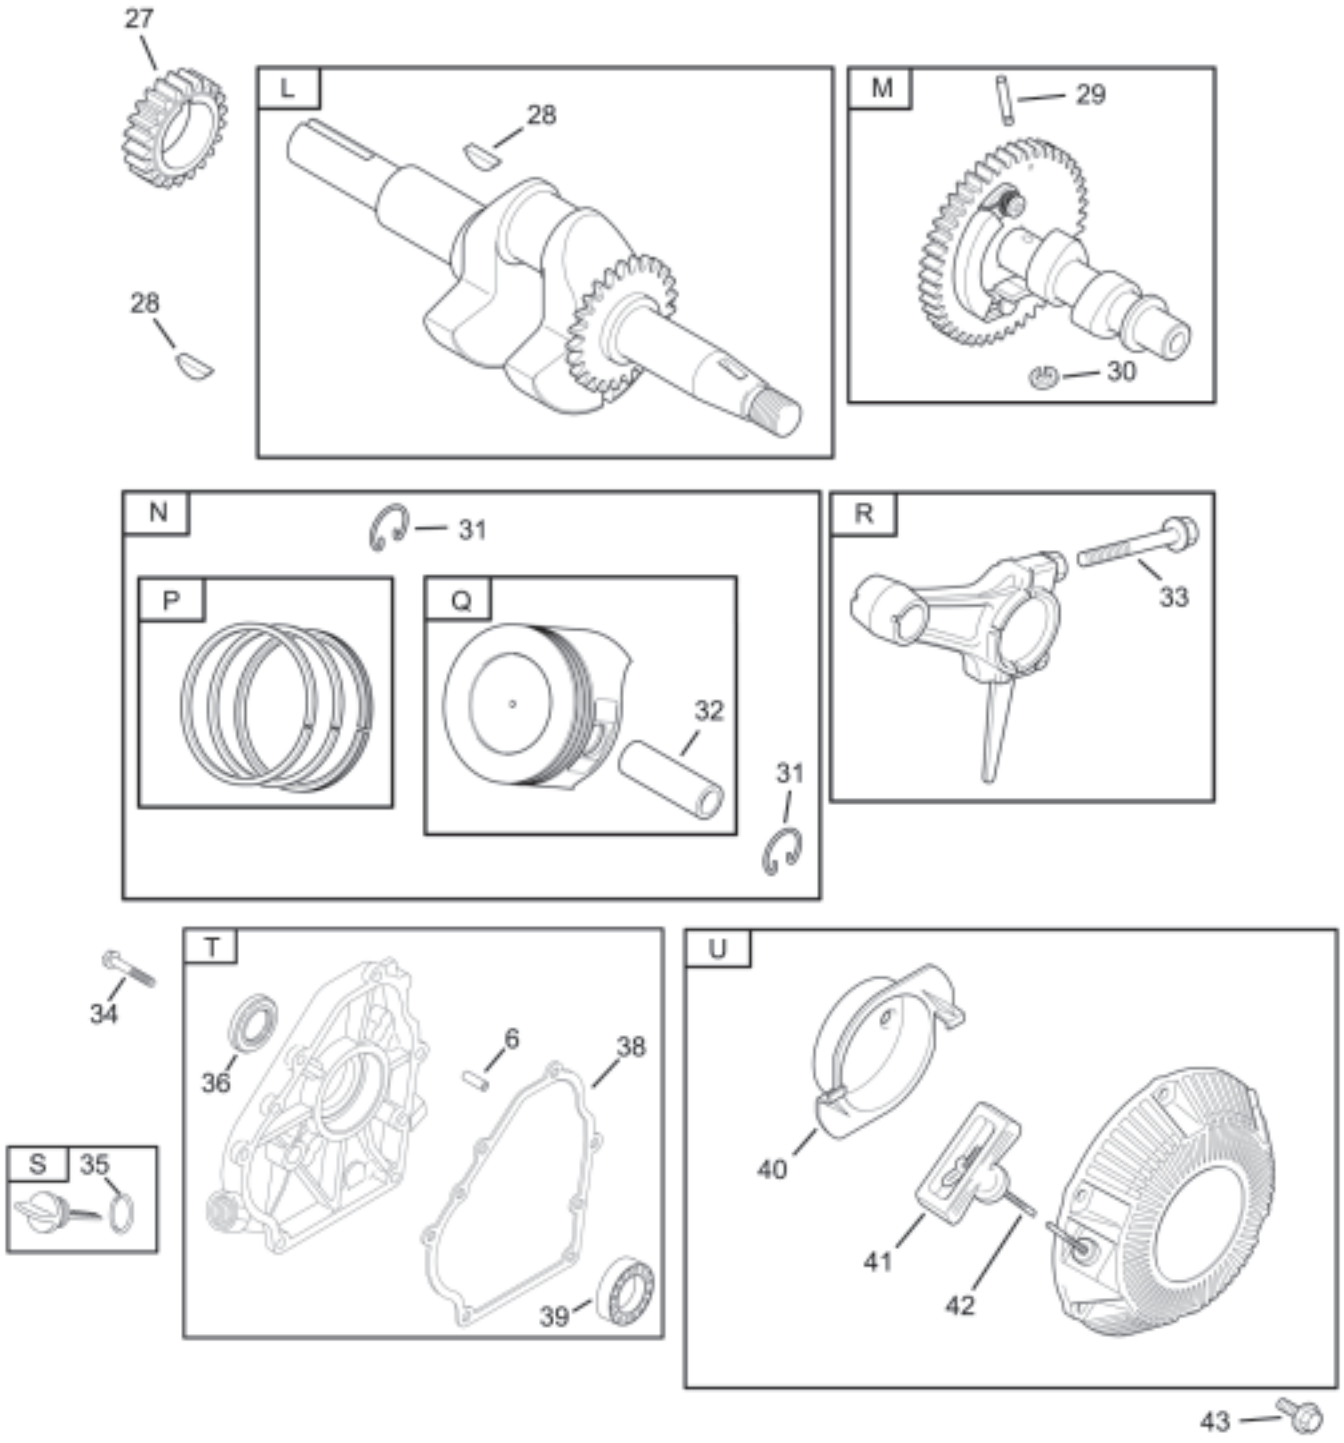

EXPLODED VIEW - ENGINE

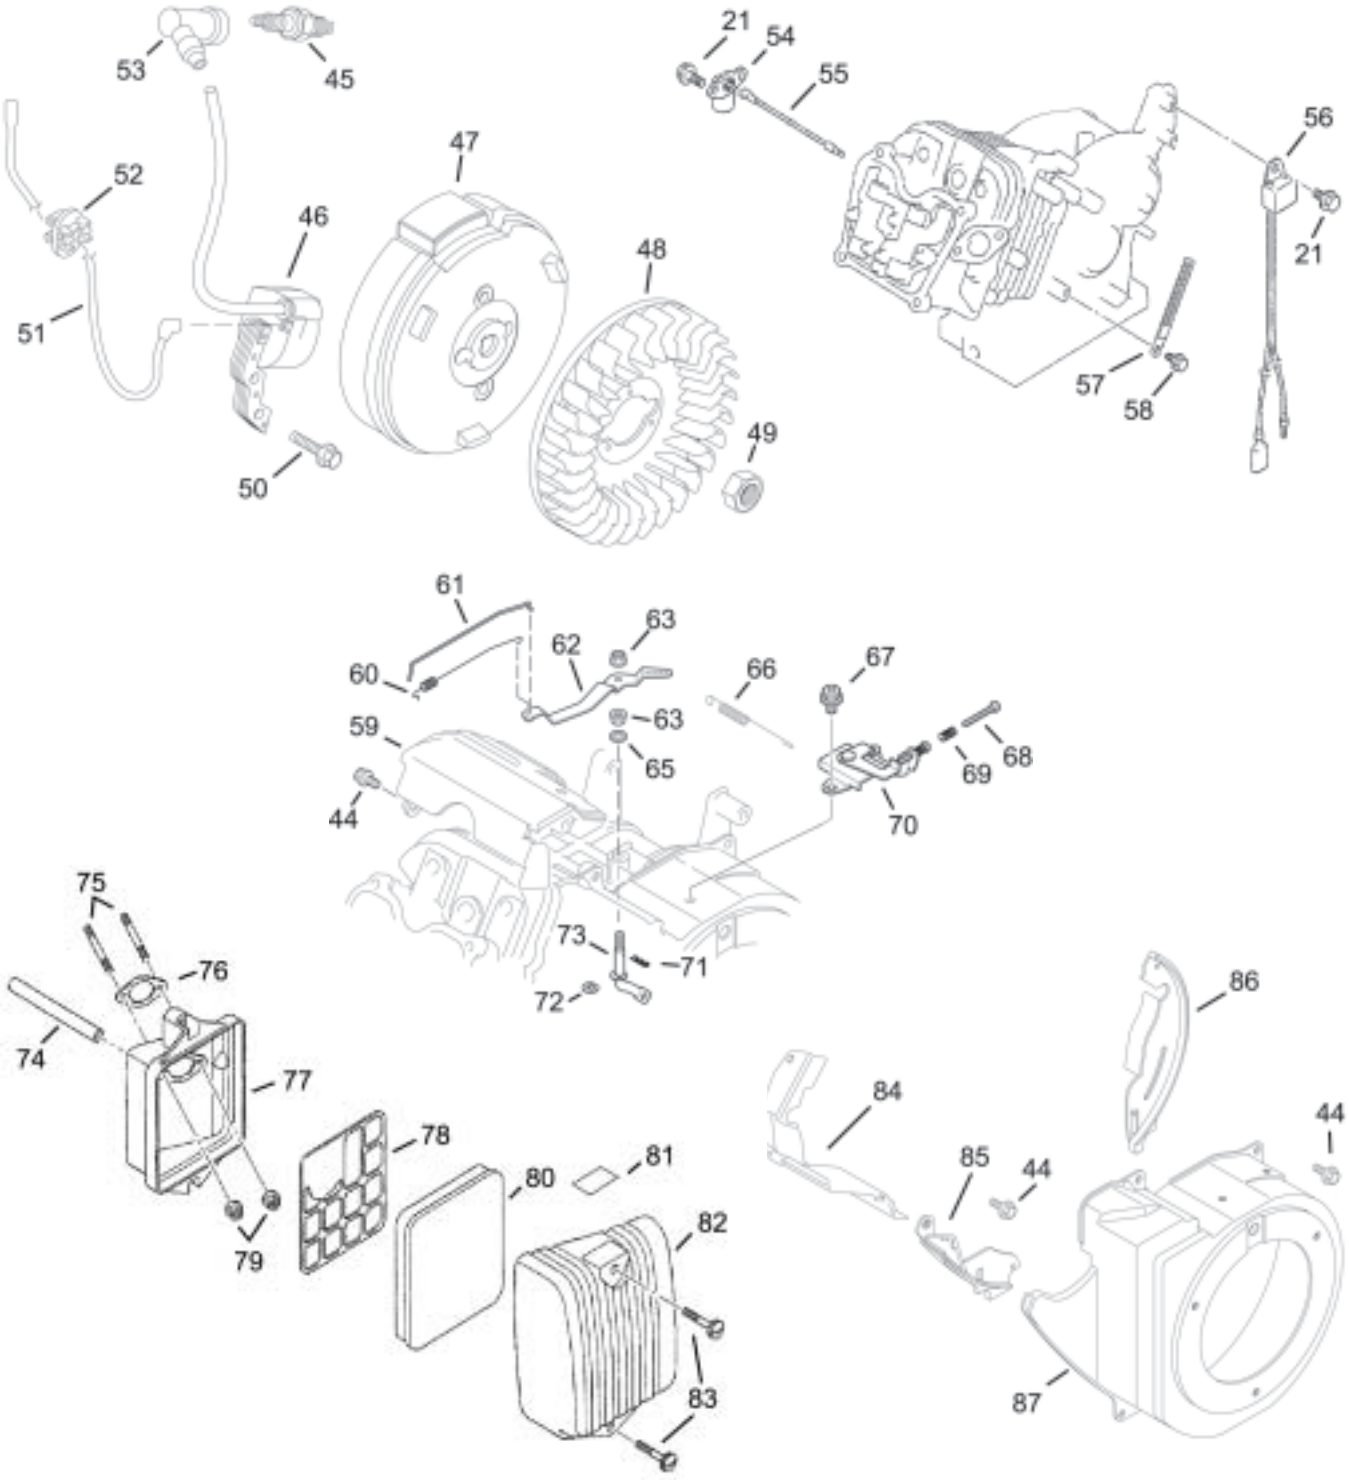

PARTS LIST - ENGINE

Item	Part #	Description
15	711287	SEAL-VALVE
16	711492	SPRING - VALVE
17	711244*	GASKET-EXHAUST (Not Shown)
18	710090	NUT, MFFLR (Not Shown)
19	197985GS	ROD - PUSH
20	711173	TAPPET-VALVE
21	710057	SCREW
22	711490*	GASKET-ROCKER COVER
23	710060*	GASKET-INTAKE
24	711763	GASKET-FLOAT BOWL
25	711756	NOZZLE-CARBURETOR
26	711754	JET-MAIN
27	711708	GEAR-TIMING
28	710037	KEY-WOODRUFF
29	711730	PIN-SHAFT
30	710548	RETAINER-E RING
31	711494	LOCK - PISTON PIN
32	711733	PIN - PISTON
33	710041	SCREW
34	710032	SCREW
35	711521	SEAL - O RING
36	197987GS	SEAL-OIL
38	711752*	GASKET-CRANKCASE
39	711175	BEARING-BALL
40	711758	CUP-FLYWHEEL
41	711540	GRIP - STARTER ROPE
42	711539	ROPE - STARTER
43	710976	SCREW
44	710023	SCREW
45	711252	PLUG-SPARK
46	711197	ARMATURE-MAGNETO
47	711735	FLYWHEEL
48	711738	FAN - FLYWHEEL
49	710048	NUT
50	711142	SCREW
51	710324	WIRE-STOP
52	710046	CLIP-WIRE
53	710634	BOOT-SPARK PLUG
54	711246	SENSOR-OIL
55	711247	WIRE ASSEMBLY
56	710305	MODULE-OIL GARD
57	710407	CLIP-WIRE
58	711427	SCREW
59	711718	SHIELD-HEAT
60	197989GS	SPRING-GOV LINK
61	197990GS	LINK - MECH GOVERNOR
62	197991GS	LEVER - GOV. CONTROL
63	711208	NUT
65	711516	WASHER
66	197992GS	SPRING-GOVERNOR
67	710074	SCREW
68	187507GS	SCREW-GOV SPD
69	187506GS	SPG-GOV SPD
70	711132	KIT-IDLE SPEED (Incl 68, 69)
71	710056	PIN-COTTER
72	710154	RETAINER-E RING (Incl 72)
73	187508GS	CRANK - GOVERNOR
74	187498GS	BRTHR, AIR CLNR
75	187500GS	STUD, AIR CLNR
76	710639*	GASKET-AIR CLEANER
77	711138	BASE - AIR CLEANER
78	711461	RETAINER-AIR FILTER
79	187503GS	NUT, AIR CLNR CVR
80	187497GS	ELEMENT, CLNR, AIR
81	187576GS	DECAL, CHOKE
82	187494GS	CVR, CLNR, AIR
83	711163	SCREW - A/C COVER
84	197998GS	SHIELD-CYLINDER
85	711746	COVER-AIR GUIDE
86	711744	COVER-AIR GUIDE
87	197999GS	HOUSING-BLOWER
A	715679	GEAR-GOVERNOR (Incl 1, 2)
B	198000GS	CYLINDER ASSY (Incl 2, 3, 4, 5, 6)
C	715811	PLUG-OIL DRAIN (Incl 7)
D	198001GS	HEAD-CYLINDER (Incl E, F, G, 8, 9, 10, 11, 12, 13)
E	715841	ADJUSTER-ROCKER ARM
F	716051	VALVE-INTAKE (Incl 14, 15, 16)
G	716052	VALVE-EXHAUST (Incl 14, 16)
H	198002GS	CARBURETOR (Incl J, 24, 25, 26)
J	715034	SPACER-CARBURETOR (Incl 23)
K	198003GS	COVER - ROCKER ARM (Incl 22)
L	198004GS	CRANKSHAFT (Incl 28)
M	198005GS	CAMSHAFT (Incl 29, 30)
N	716061	PISTON ASSY (STD, Incl P, Q, 31)
P	715060	RING SET-STD
Q	716061	PISTON ASSY (STD, Incl 32)
R	716059	ROD-CONNECTING-STD (Incl 33)
S	187474GS	DIPSTICK (Incl 35)
T	198007GS	COVER-CRANKCASE (Incl 6, 36, 38, 39)
U	716068	STARTER - REWIND (Incl 40, 41, 42)
V	187461GS	SET, GSKT, MITSU (Incl 13, 17, 22, 23, 38, 76)

* = Included in Gasket Set "V"